



Anziehvorschrift Zylinderkopf	152.820	 Das Original
Tightening Instructions for Cylinder Head	passend für / suitable for adaptable à / adaptable a	
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas	Toyota	

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

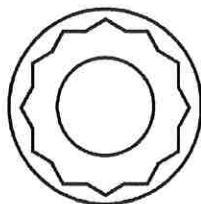

708.240

M 12x1,25x107/126

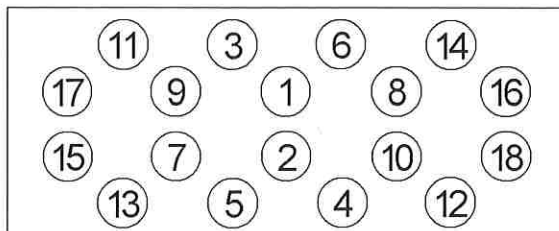

Anziehen/
Tightening/
Serrage/
Apriete

 38 Nm
 78 Nm
 90°
 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 93,5; ÷: 1,65

Mot: 2L, 2L-T

2,4 ltr.

55-66 kW (75-90 PS)

Hiacce III-IV, Hilux, Land Cruiser

Taro

Elring-Serviceteam
Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/10/10

152.820