


Fitting instruction for: **Towbar wiring harness**

Part number : **PZ457-J9563-00**










Application:





Model name	Model year	Body	Model codes
<b>LAND CRUISER</b>	09/2002 →	3/5 	<b>**J12*R-G** * * W</b>

Note:


Read this mounting manual carefully, before you start the installation.  
 Warranty is granted only when installation is done by your Toyota dealer.  
 Modification related to design, construction, illustrations and text are reserved.

PZ457-J9563-00

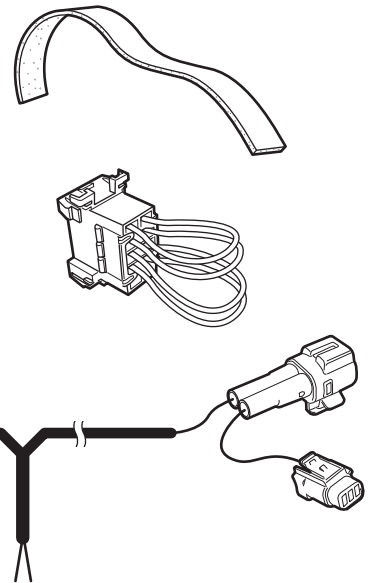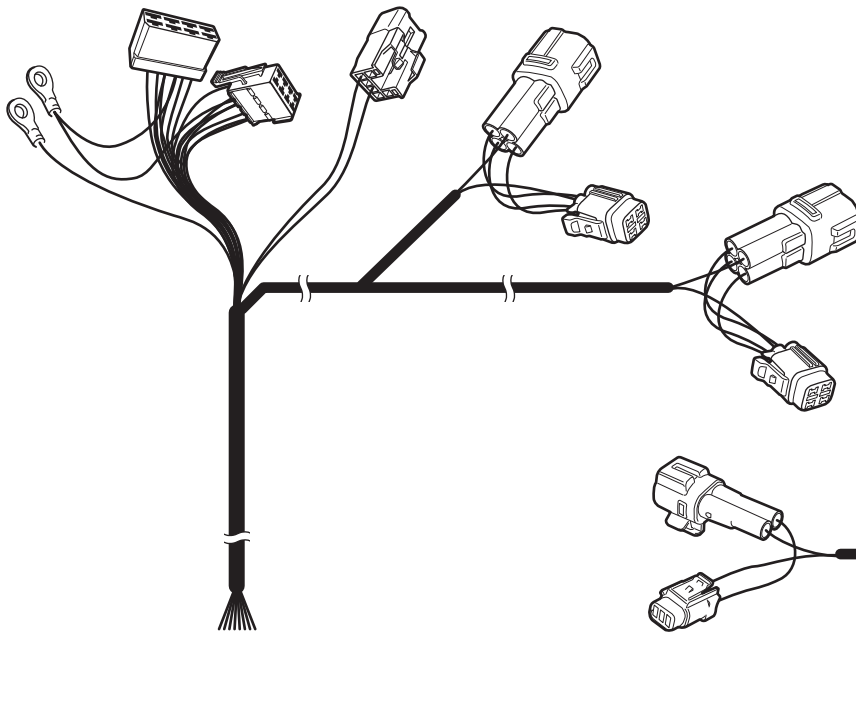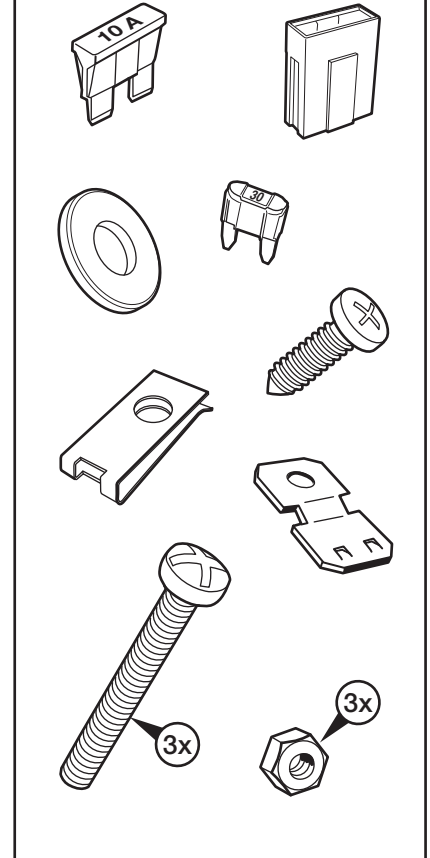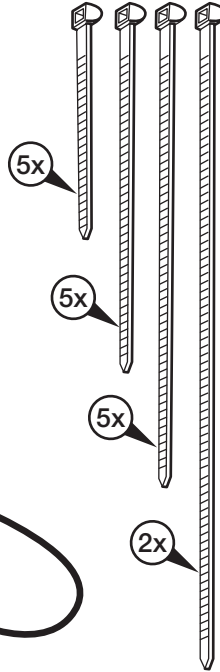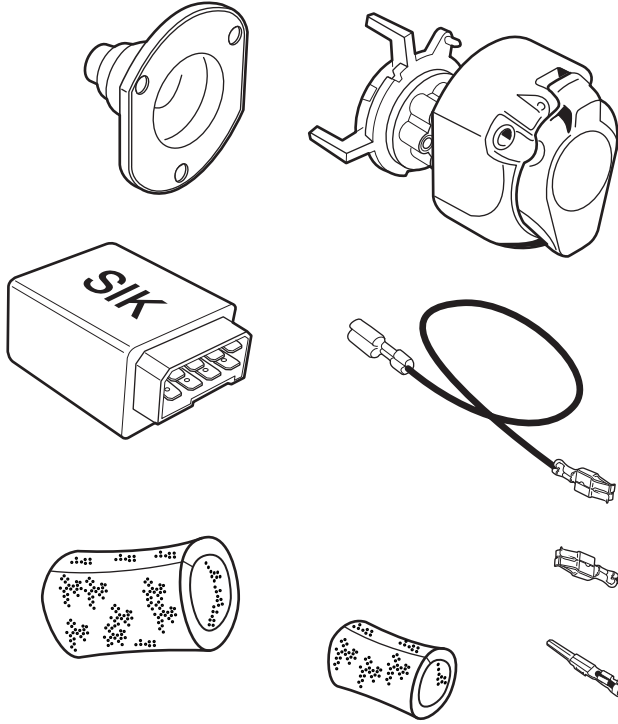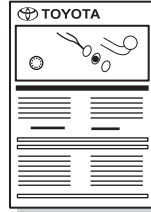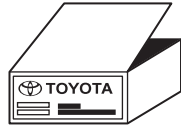


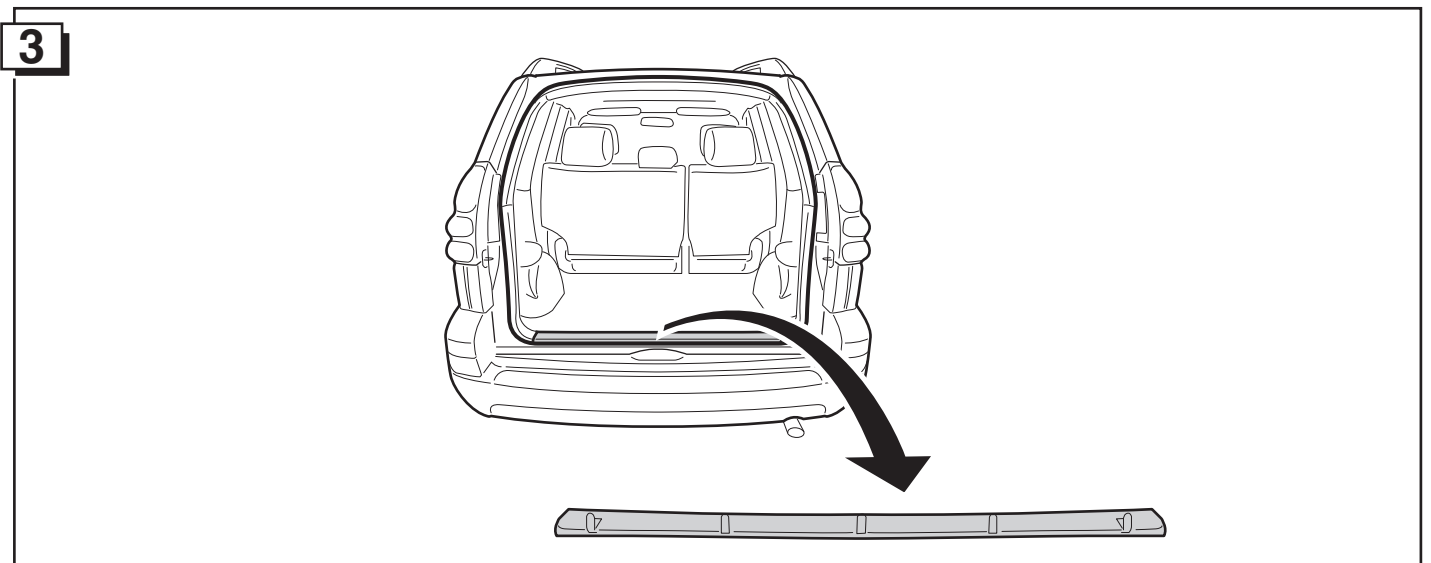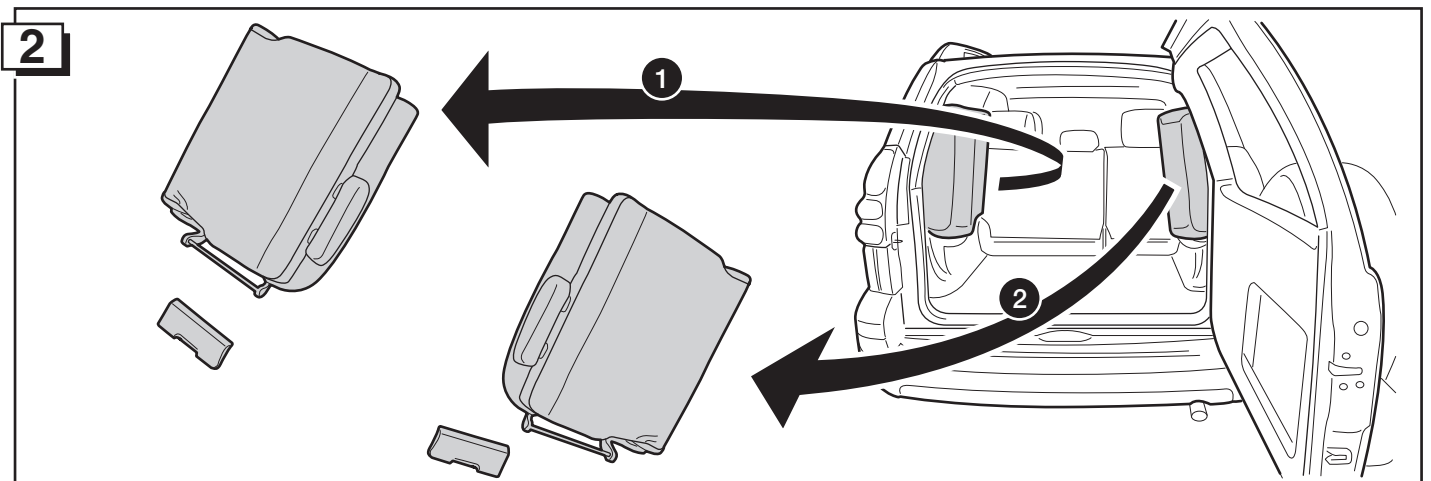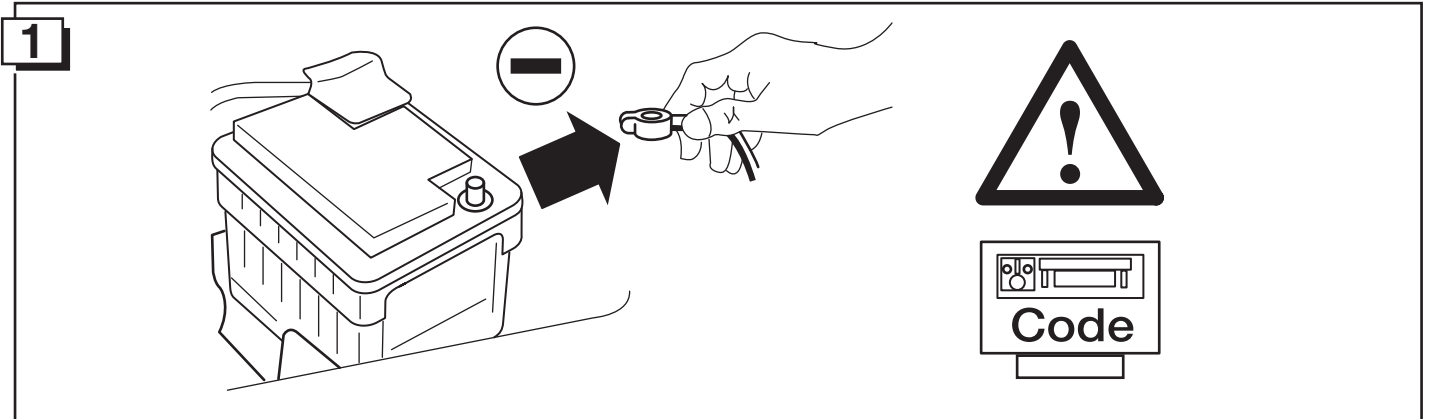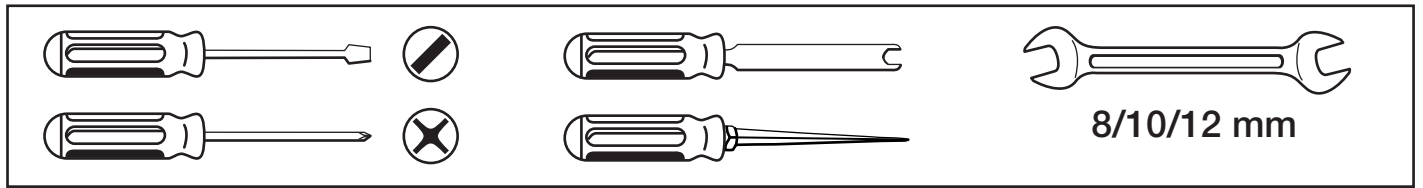



**4**

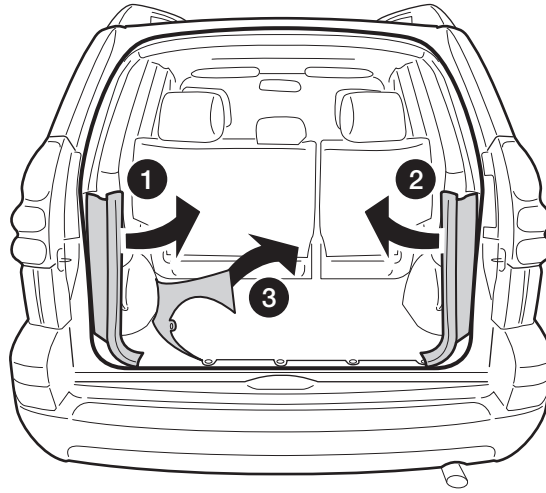


**INFO**

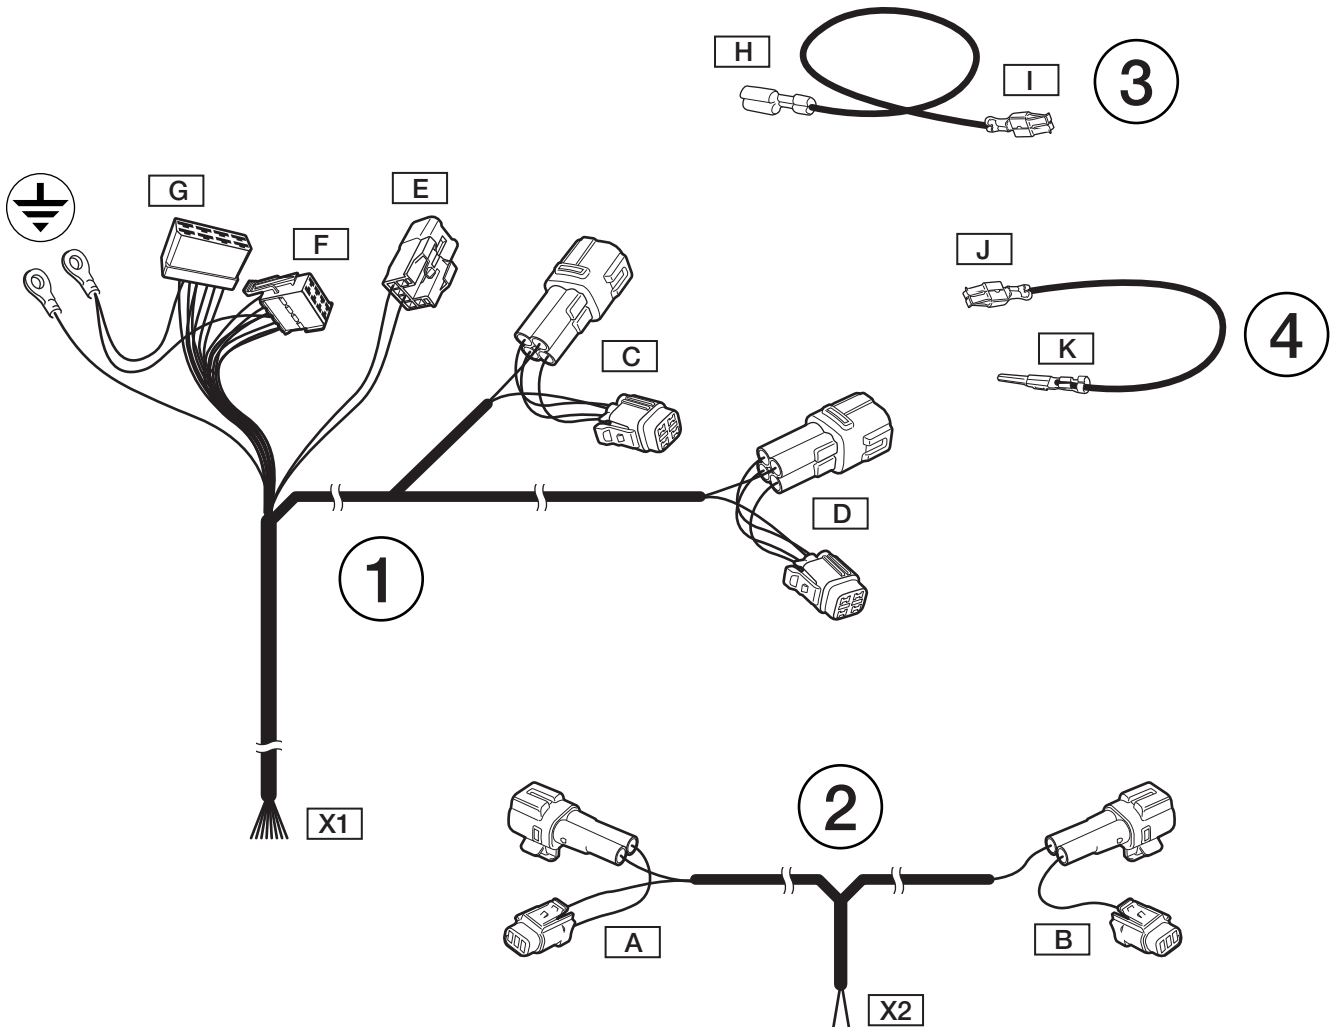


## ROUTING

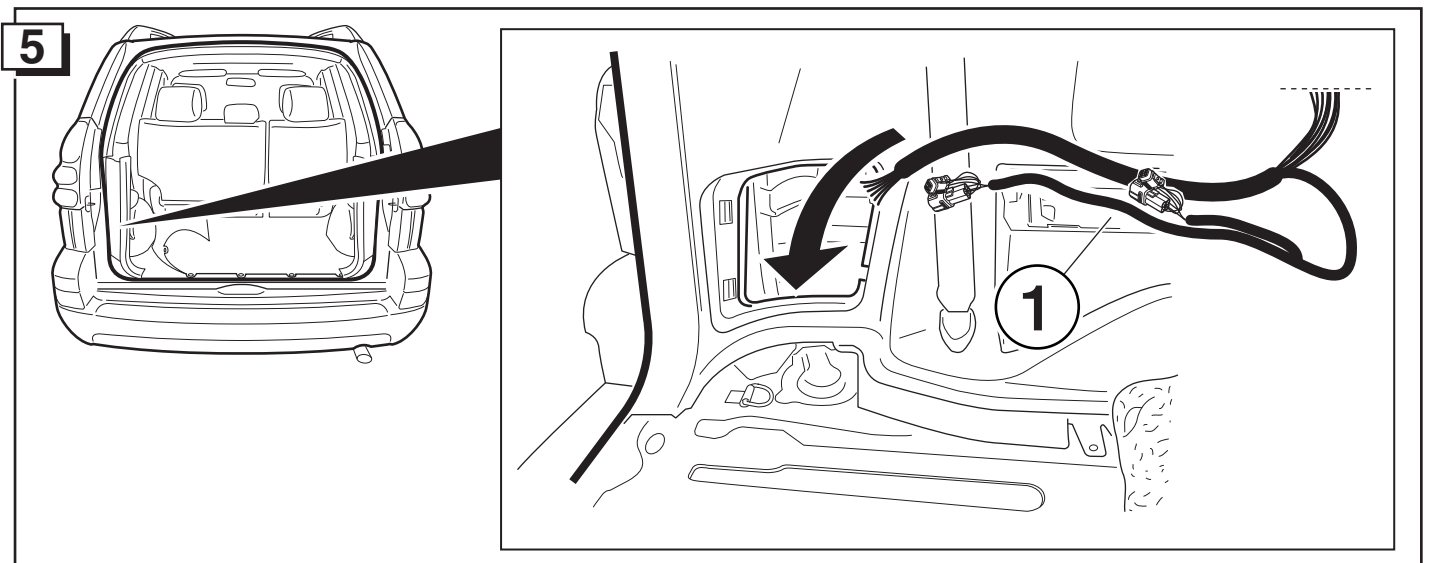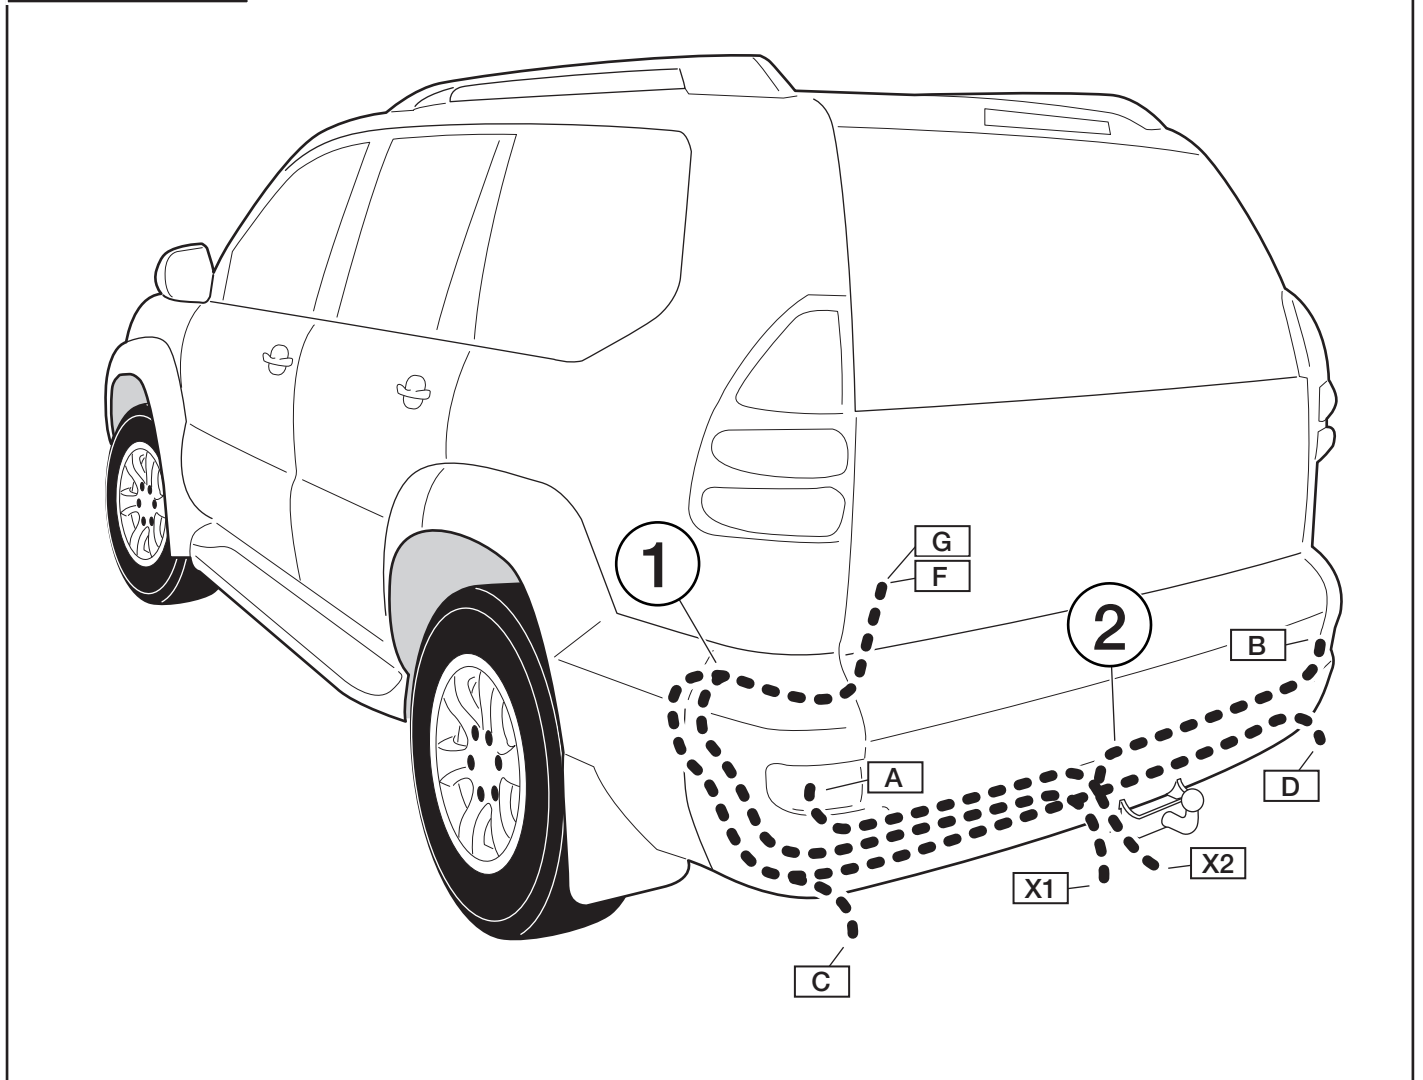



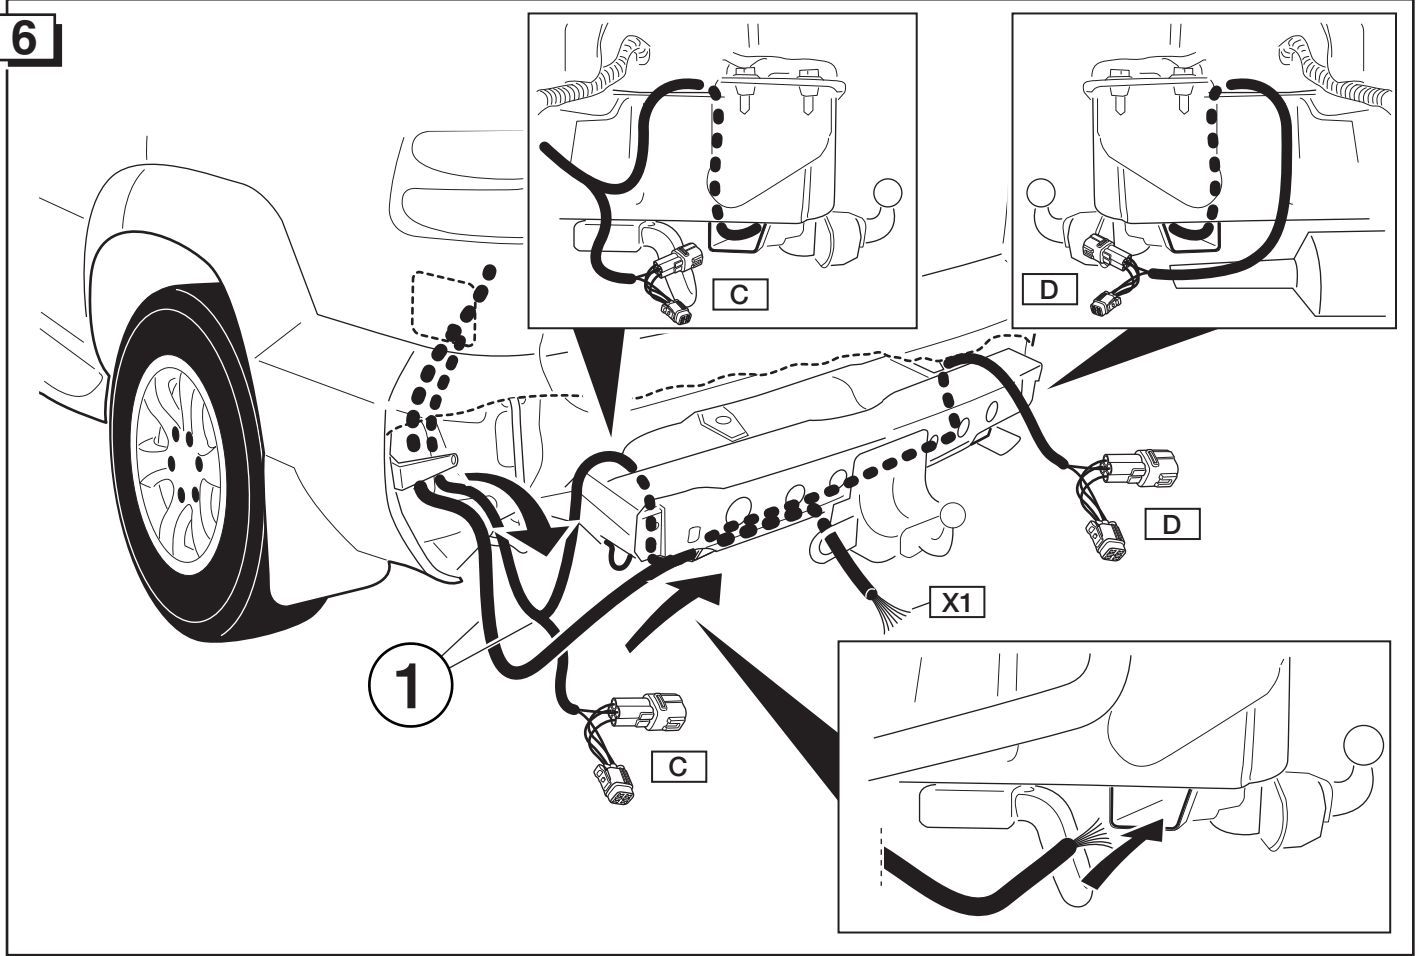



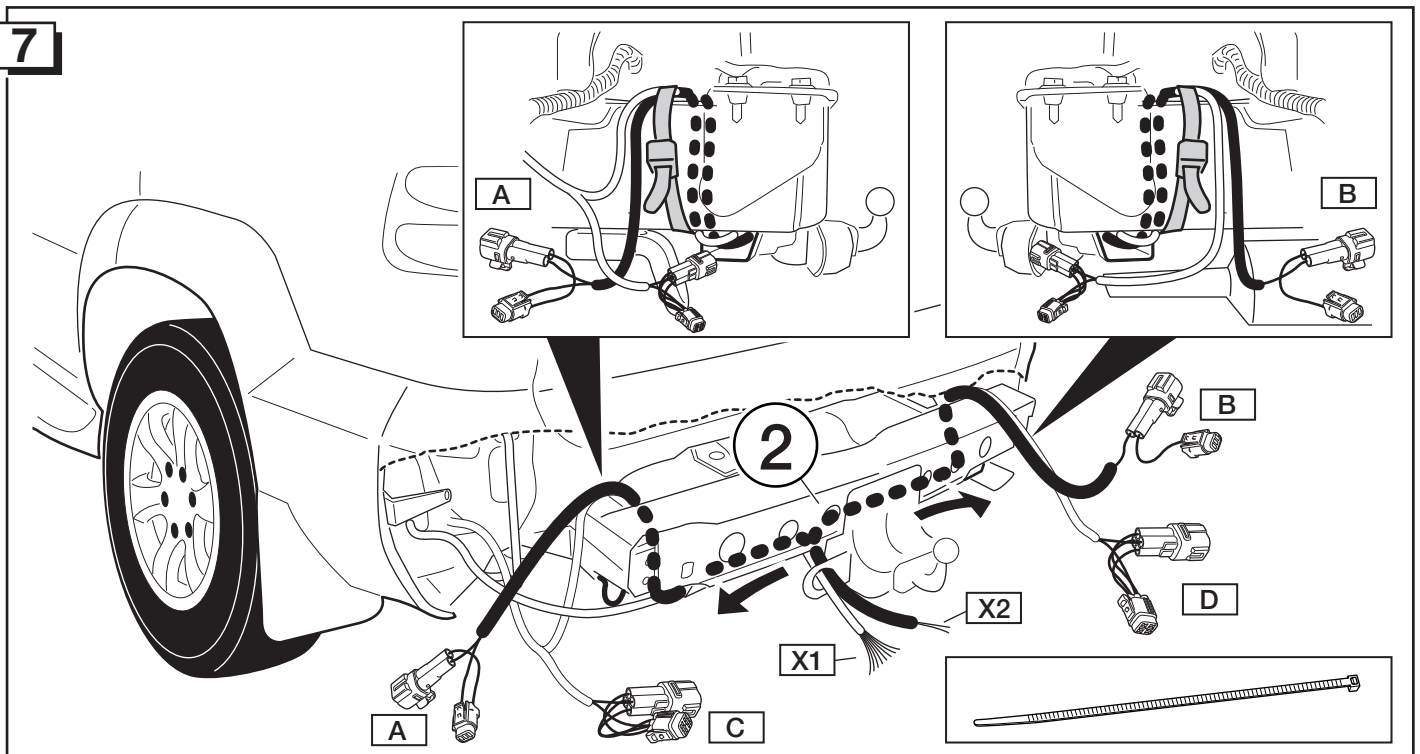

6





7





## 8

<b>1/L</b> 	<b>2</b> 	<b>2a</b> 	<b>3/31</b> 	<b>4/R</b> 	<b>5/58-R</b> 	<b>6/54</b> 	<b>7/58-L</b> 
Yellow	Blue	Grey	White	Green	Brown	Red	Black

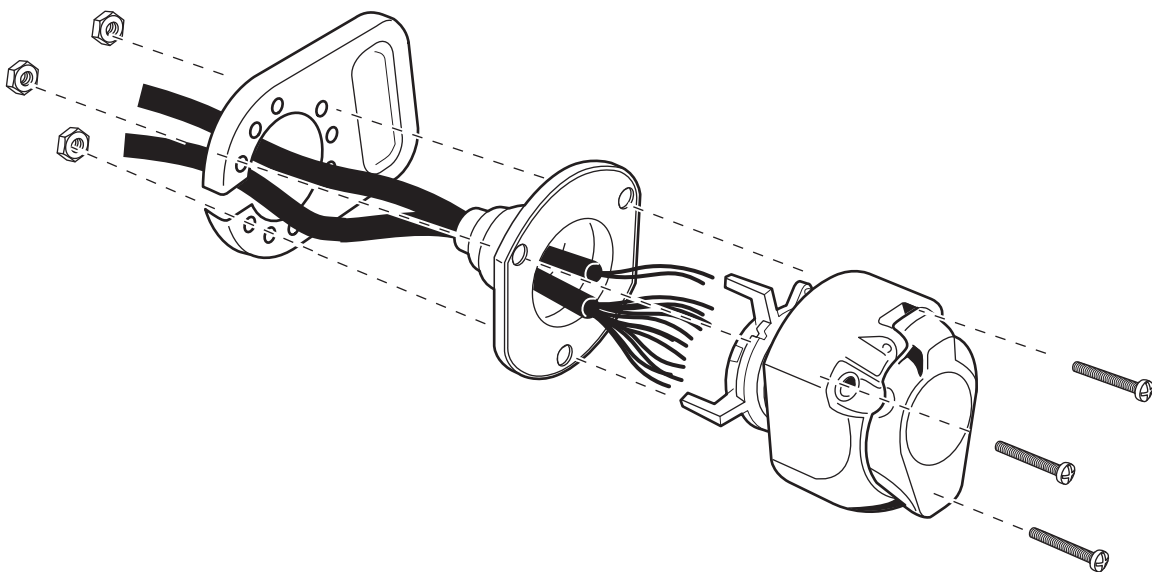
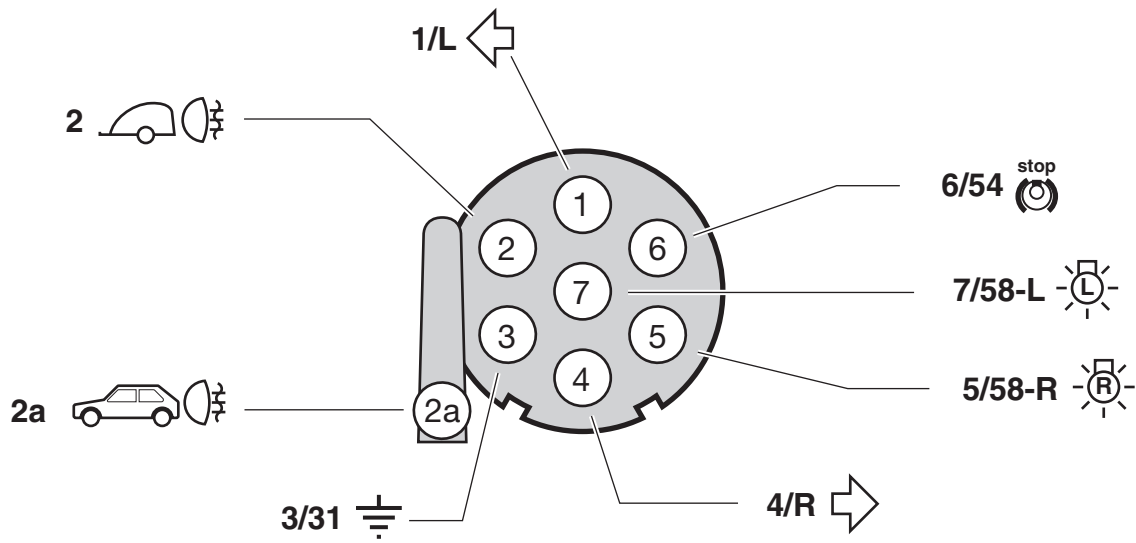





9

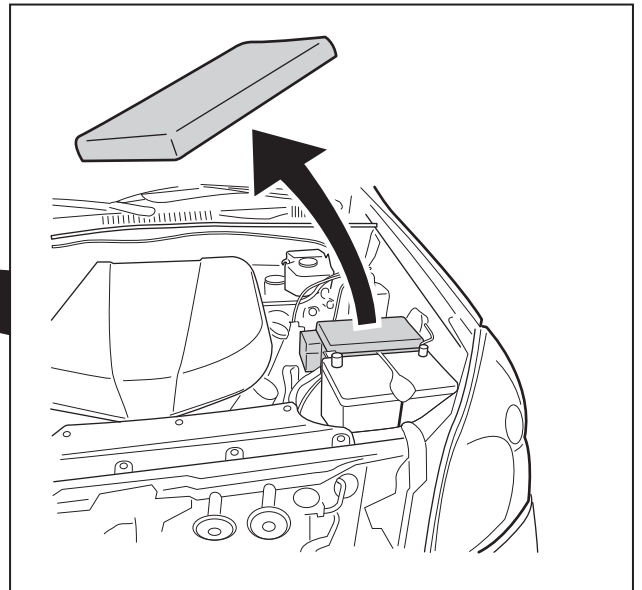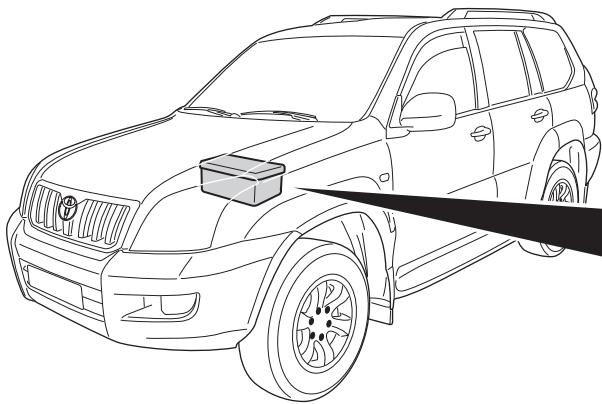









10



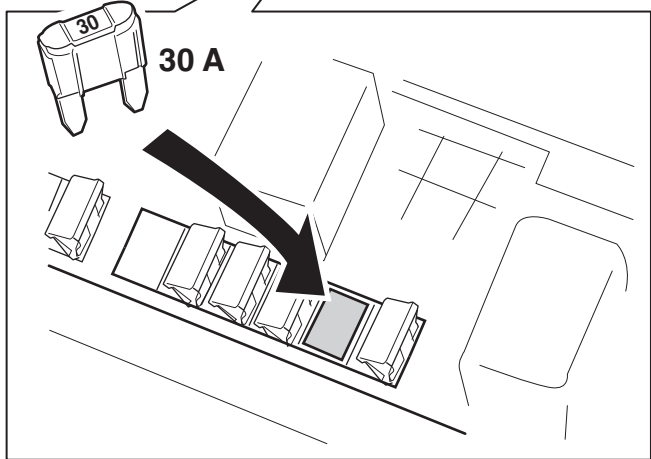
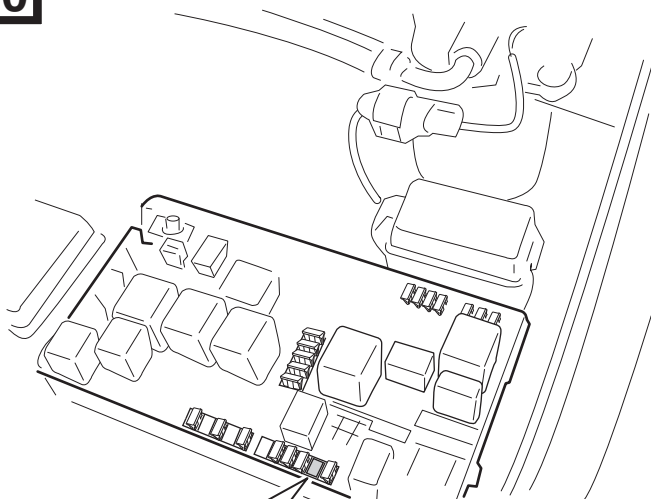


11









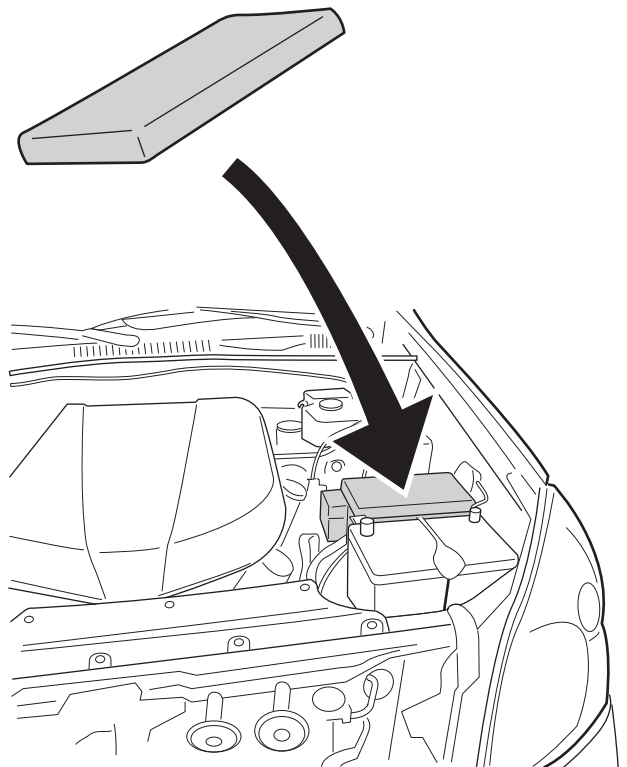




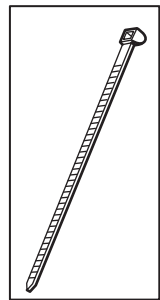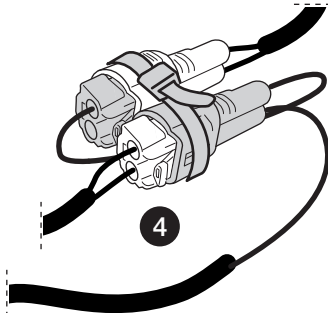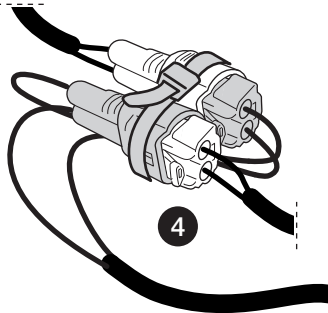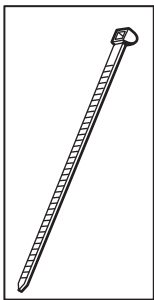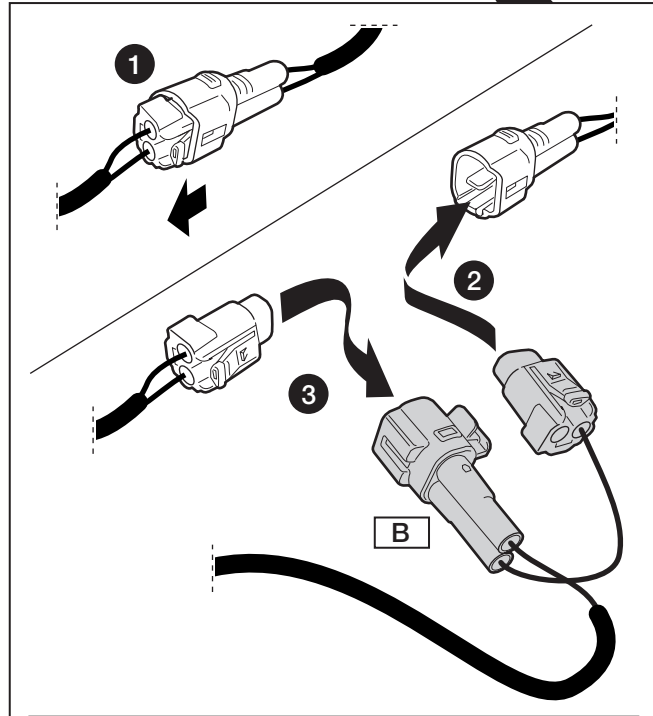
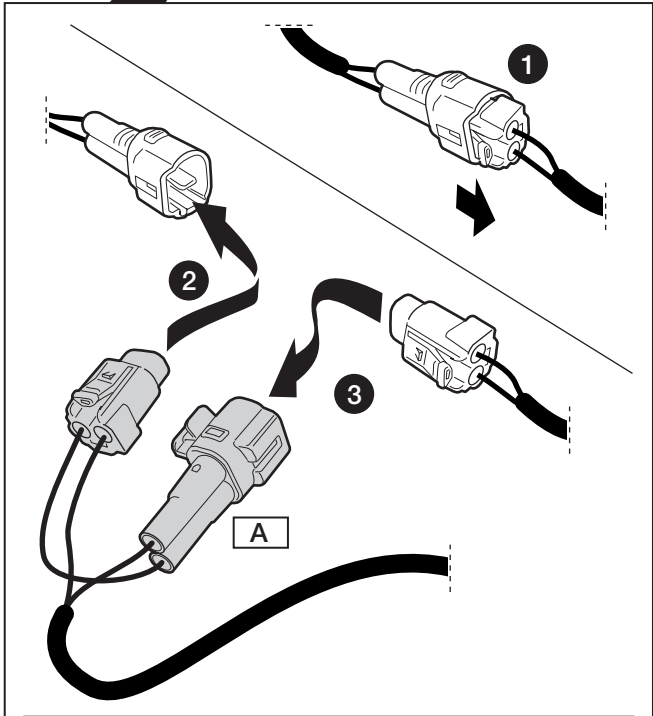
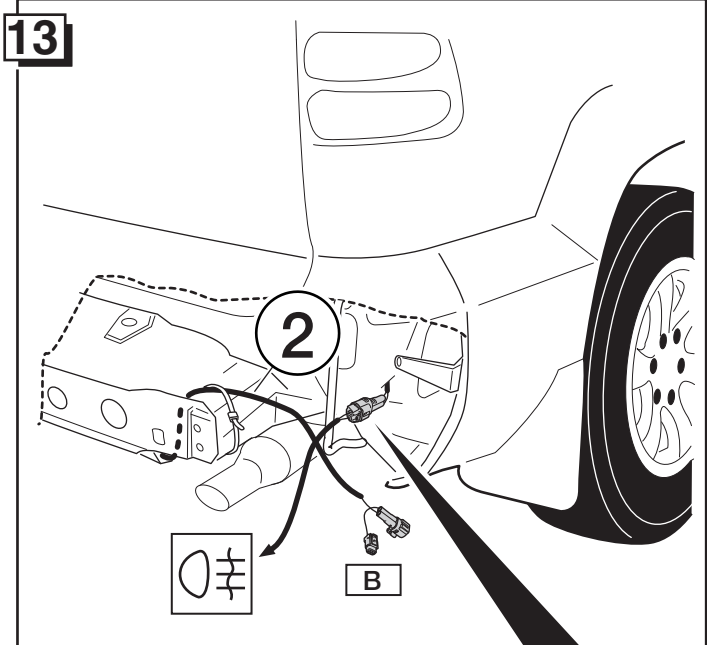
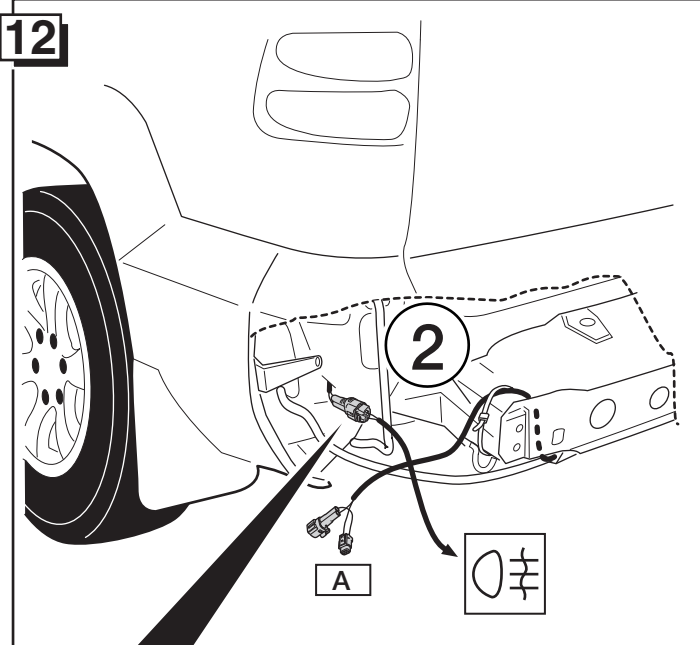


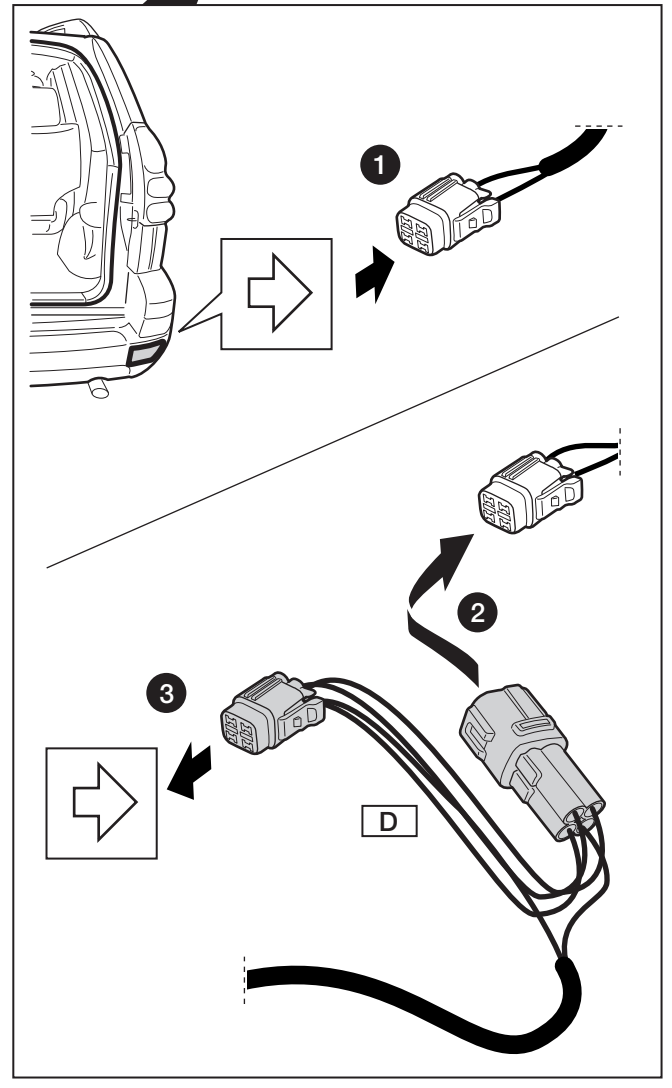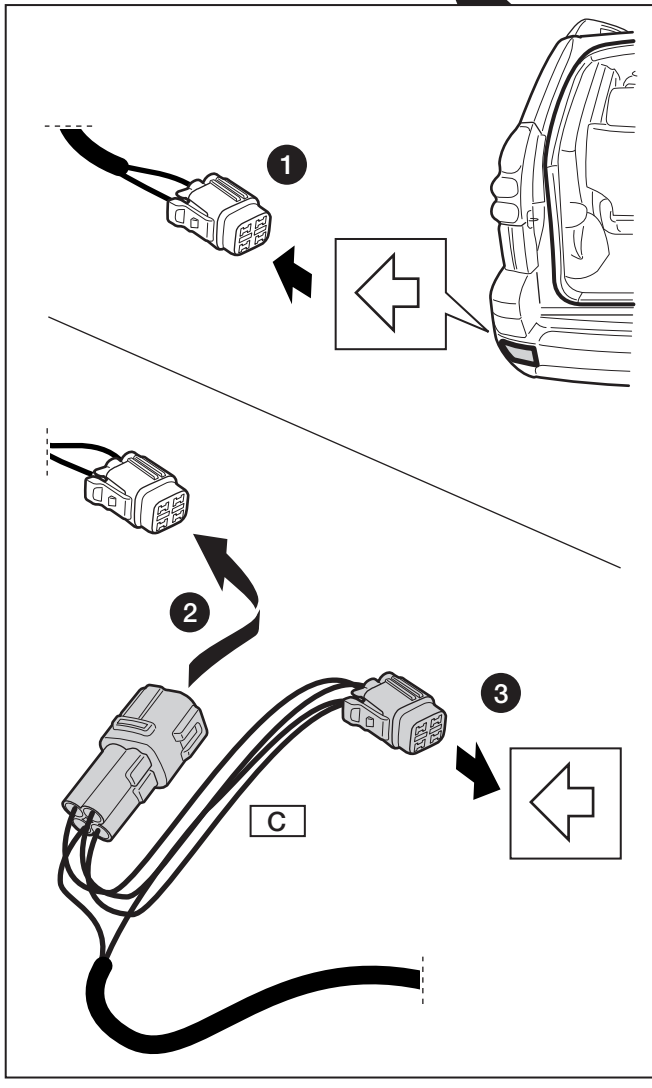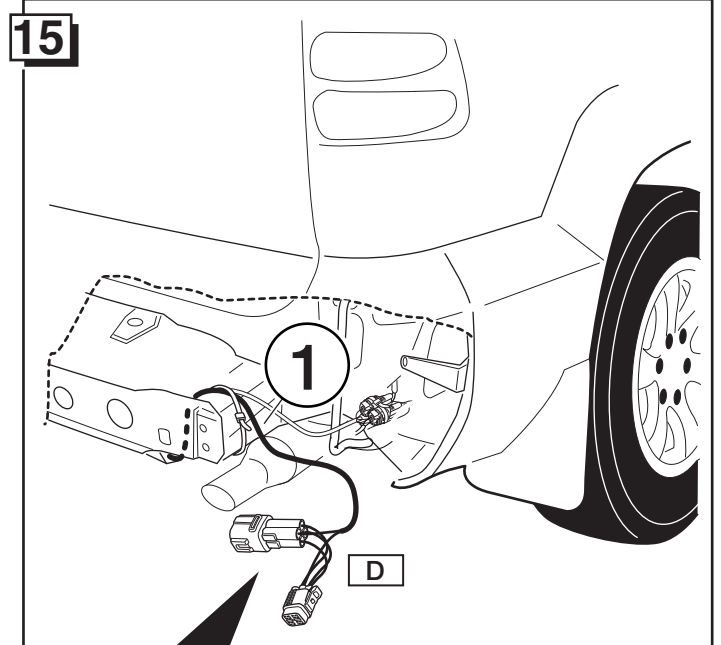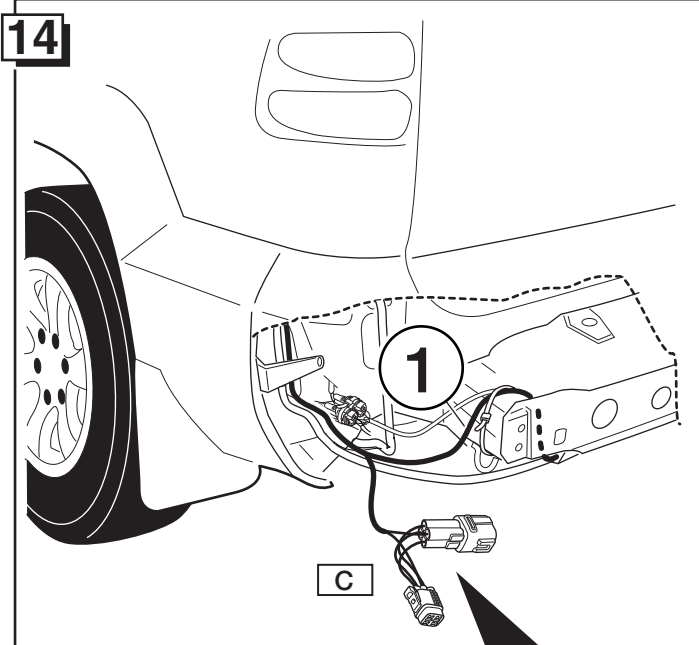



16

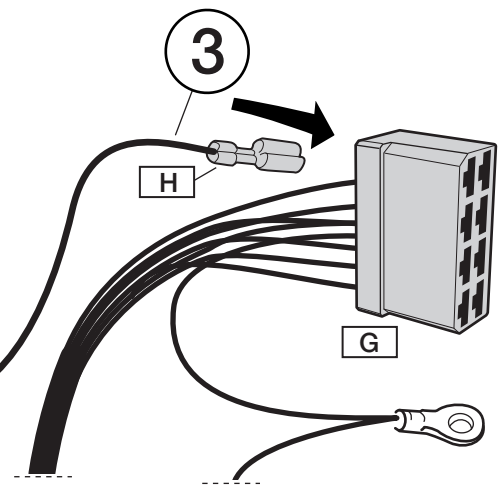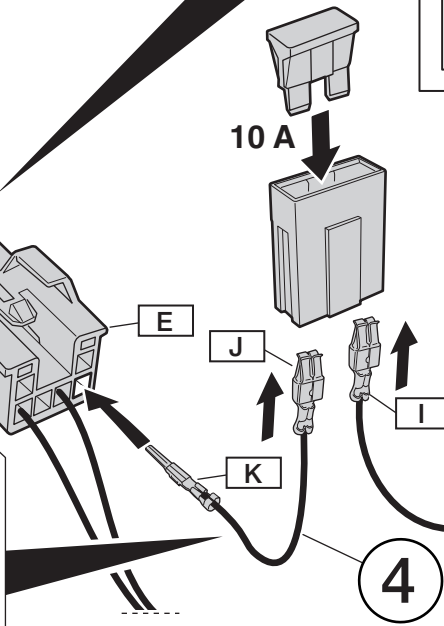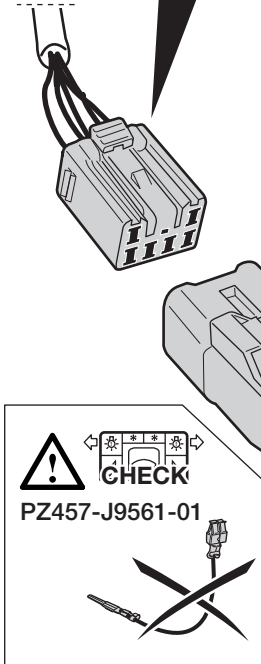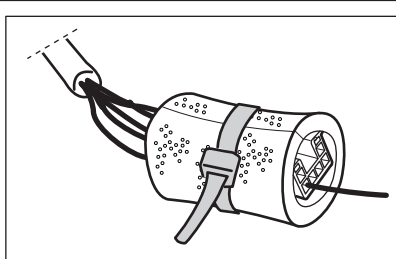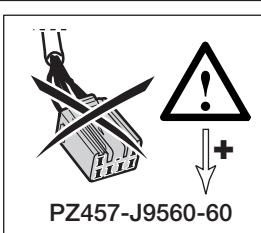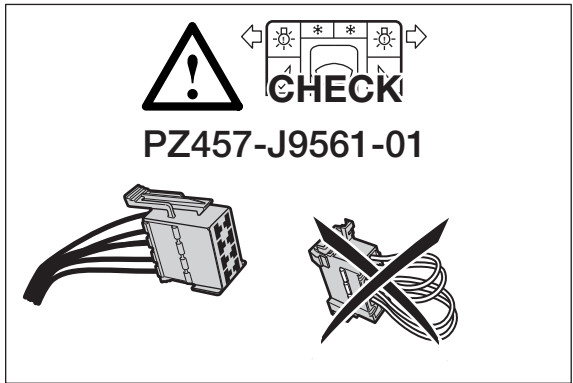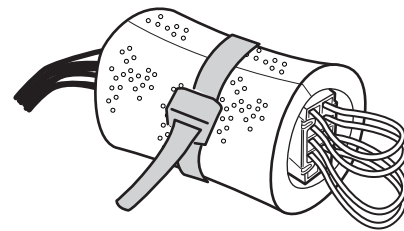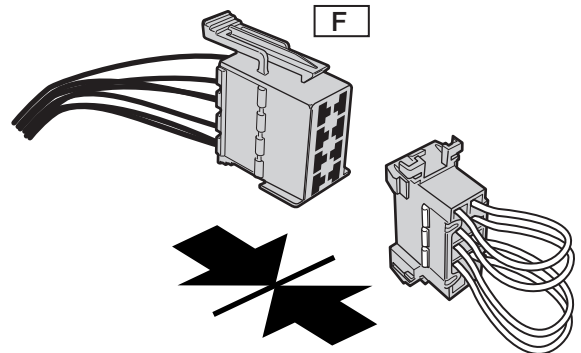
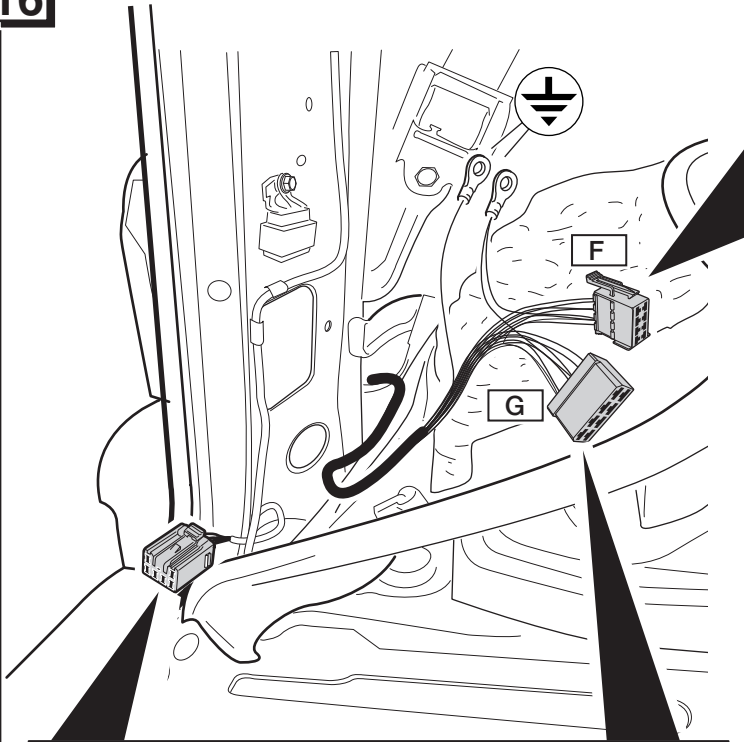


17

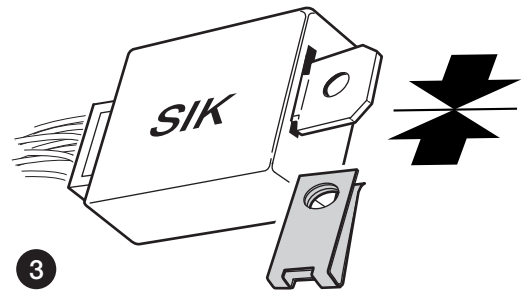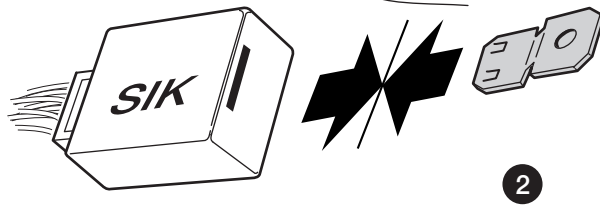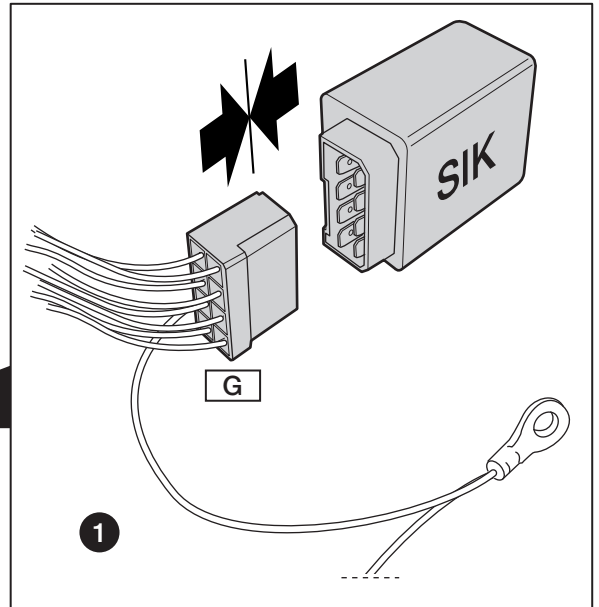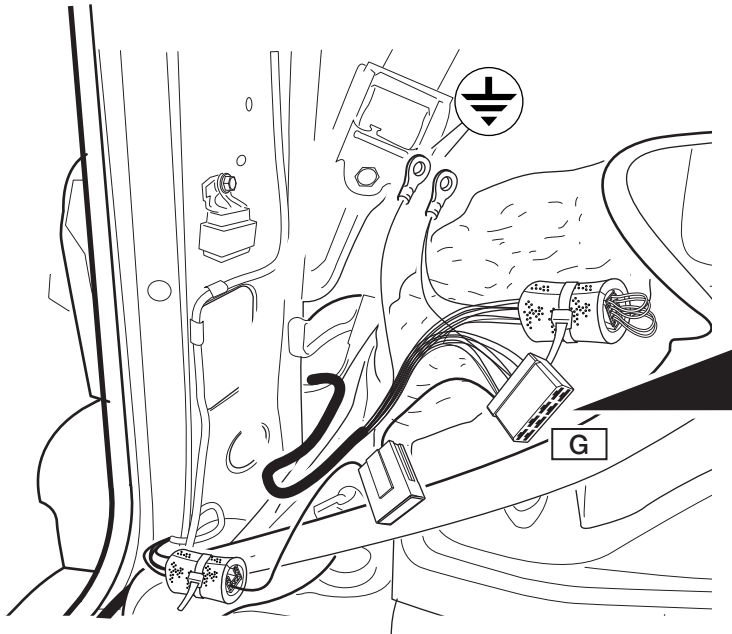

18

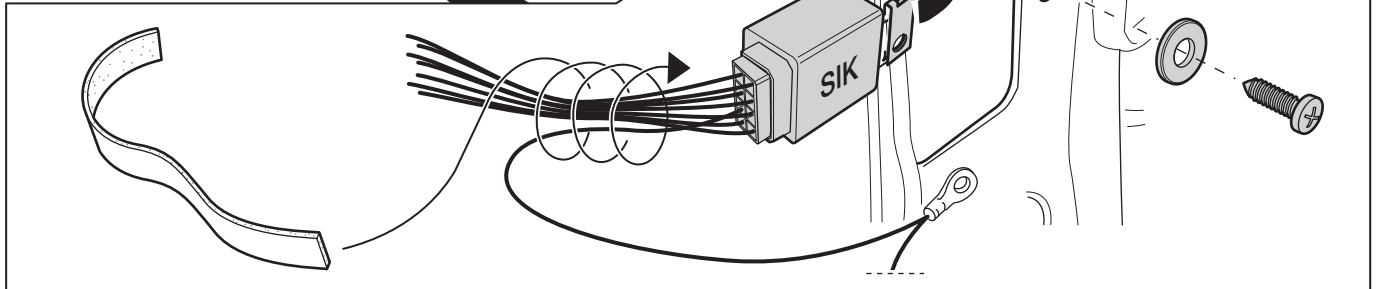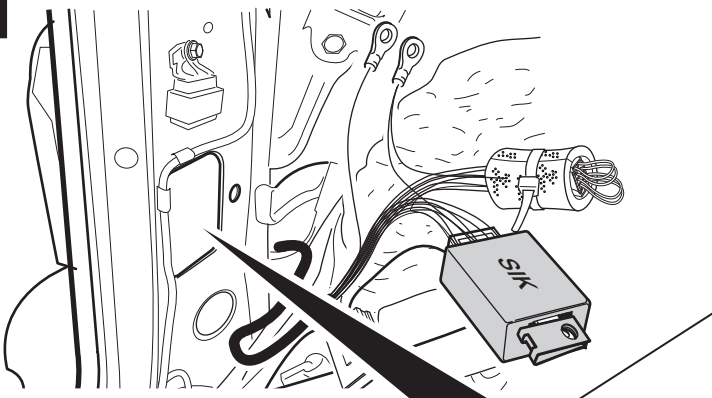


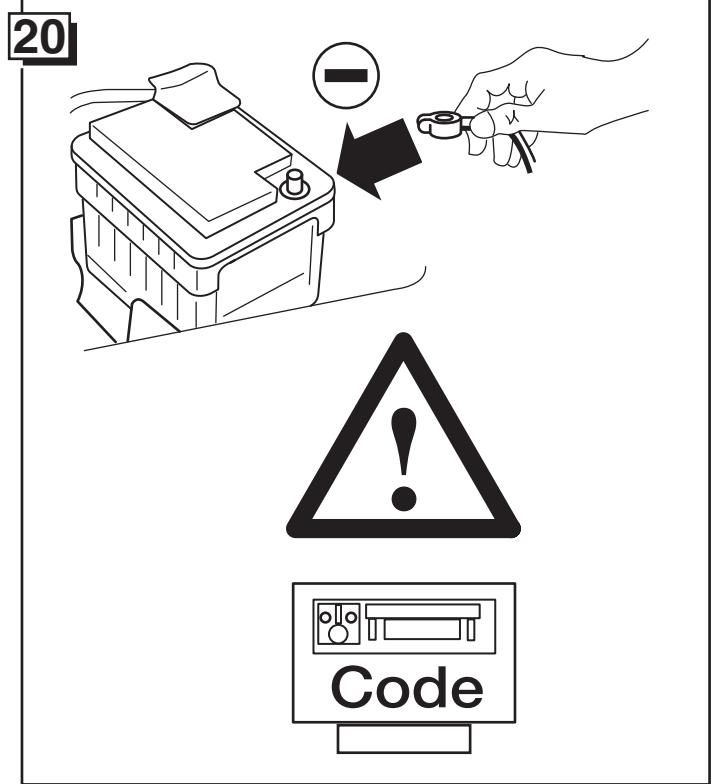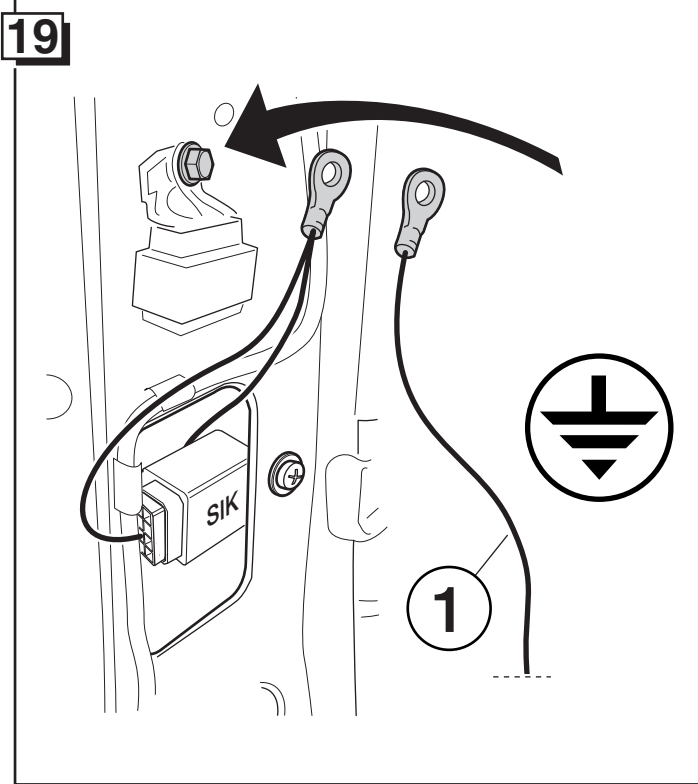


**21**

**!**

**CHECK FUNCTIONS !  
FUNKTIONEN KONTROLLIEREN !  
CONTRÔLER LES FONCTIONS !  
CONTROLEER FUNCTIES !**

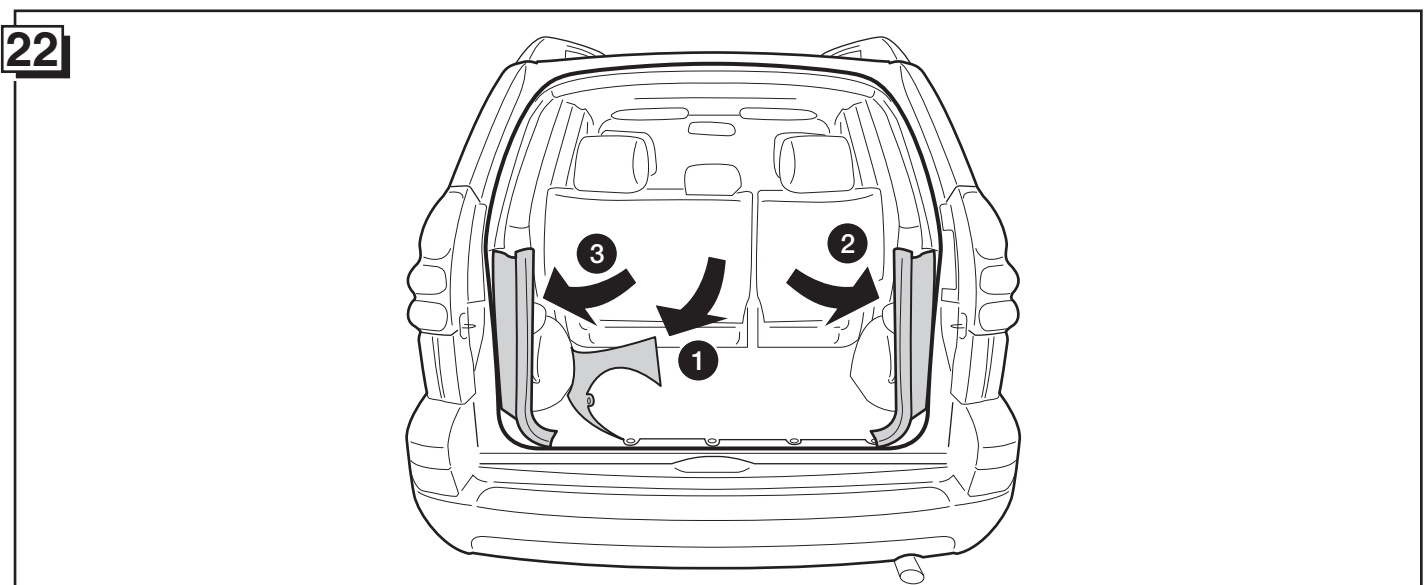

23

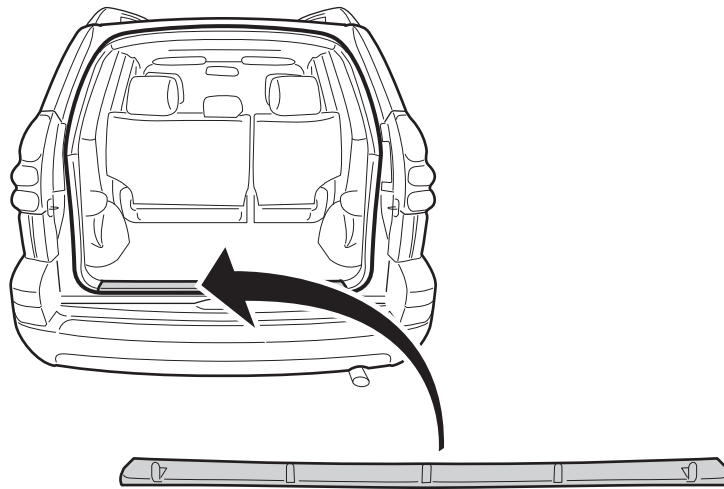

24

