



TOYOTA

ALWAYS A
BETTER WAY

Hilux

Wind deflector

Installation instructions


Model year: 2015/06
Vehicle code: GUN1***-D***HW
Part number: PC162-0K003

Manual reference number: AIM 003 603 - 0

Revision Record


Rev. No.	Date	Page	Picture	Update	New	Deleted steps

PC162-0K003

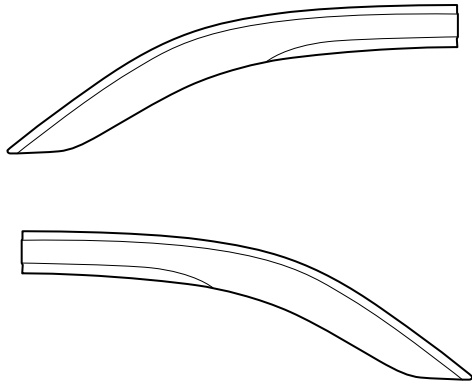

A

1x

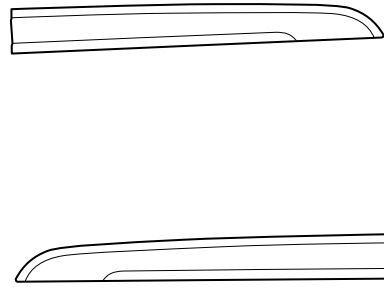


B

1x




C


8x

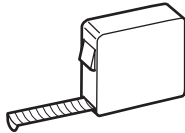

PZ415-00000-00



**3M adhesion promoter
4298 UV**





**CLEANER
DEGREASER**




40°C


18°C

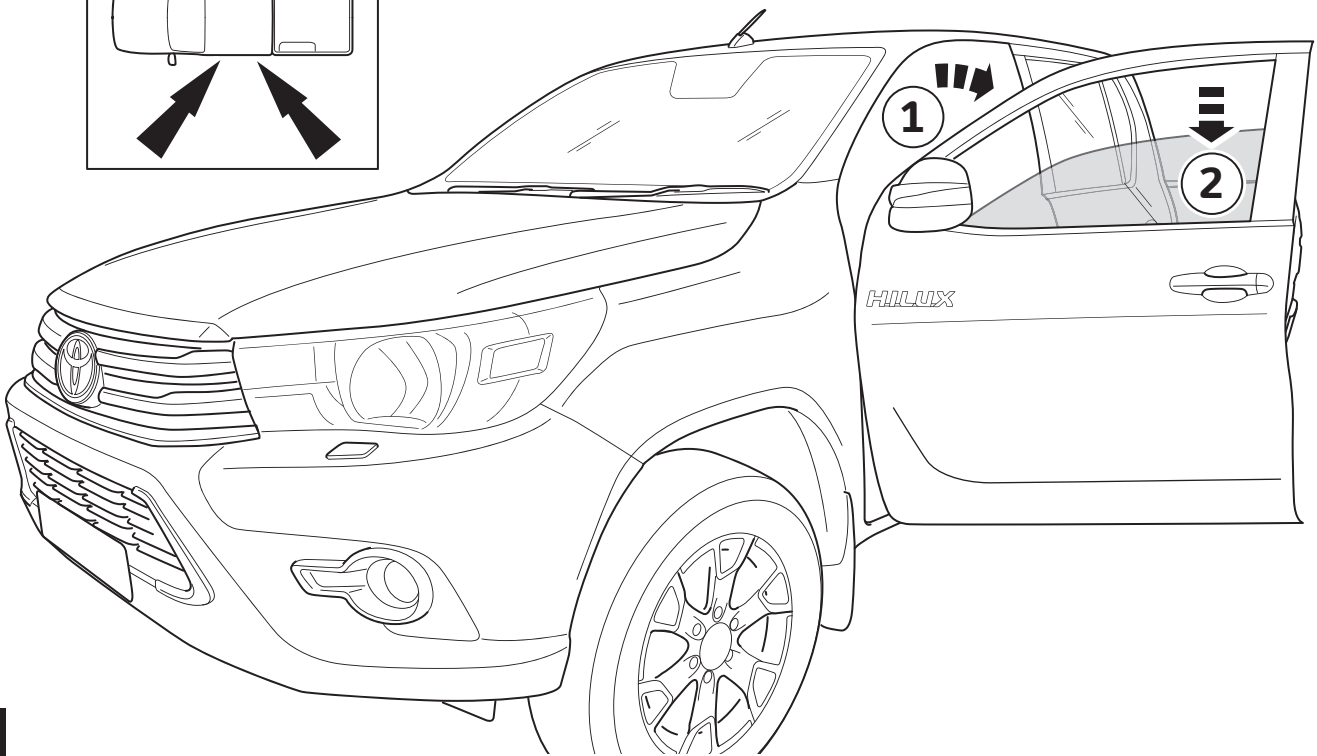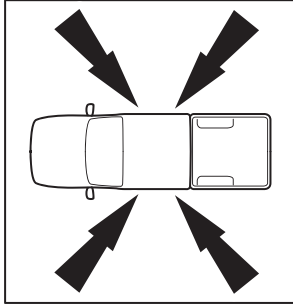


1

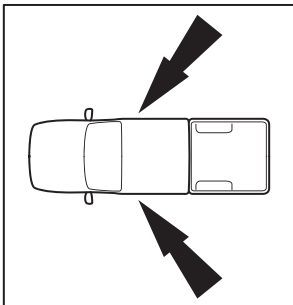




**CLEANER
DEGREASER**

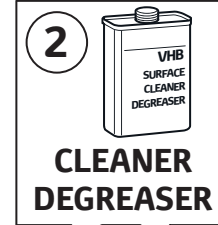


**CLEANER
DEGREASER**

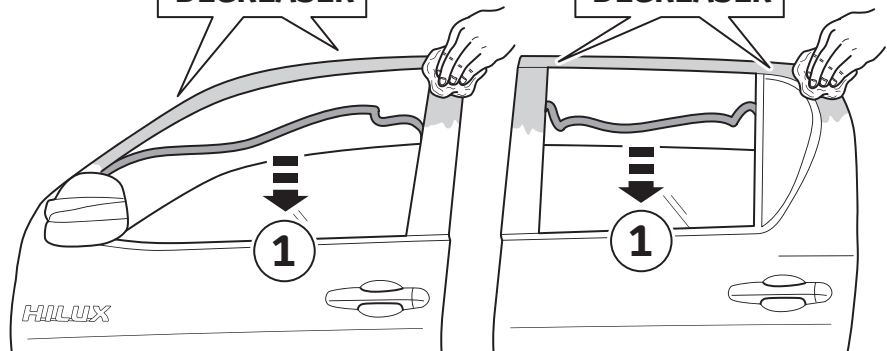


2

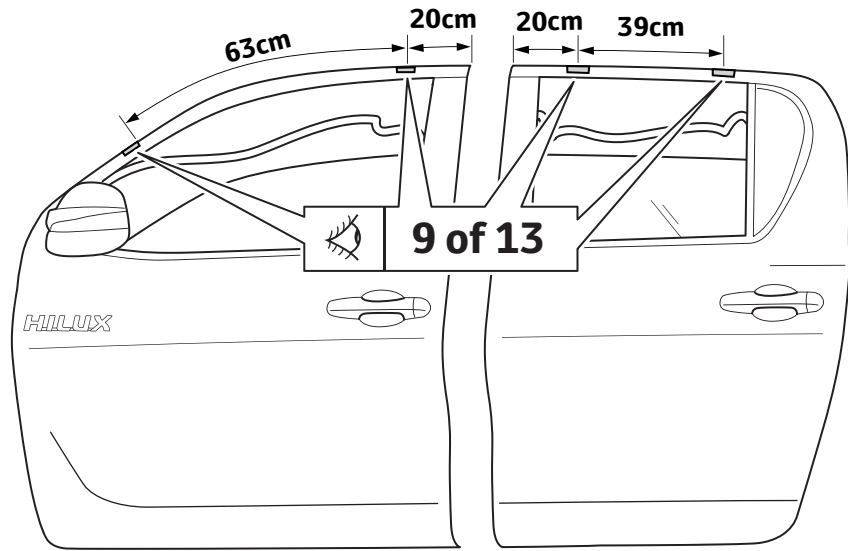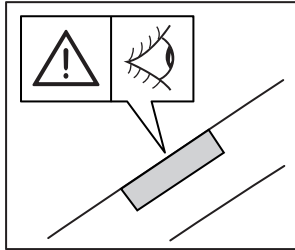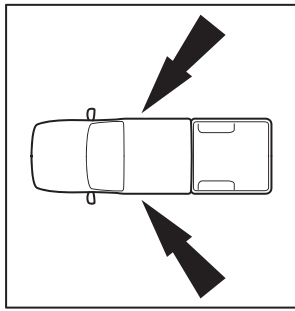


3

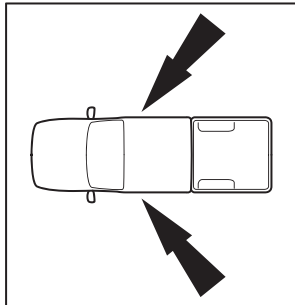


PZ415-00000-00



2 

**3M adhesion promoter
4298 UV**




 **>1.5 mins.
< 1 hour**

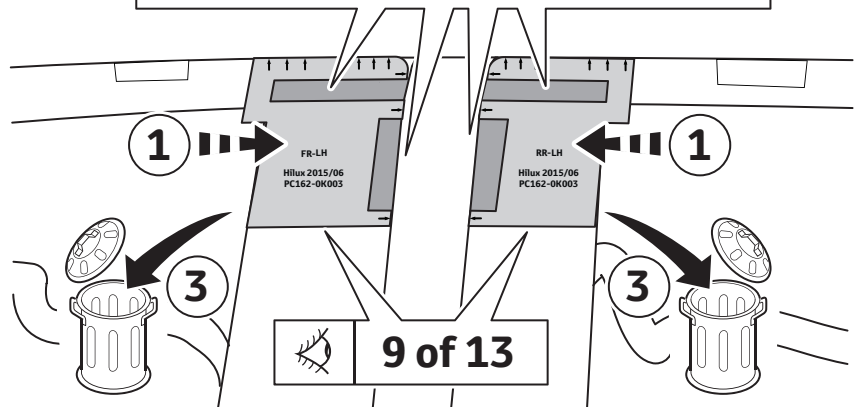




4

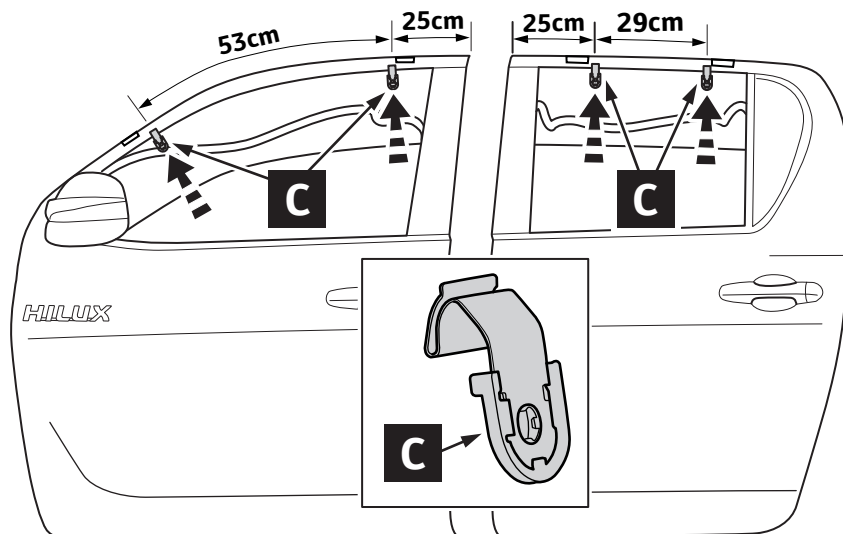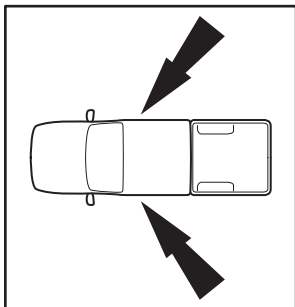


5

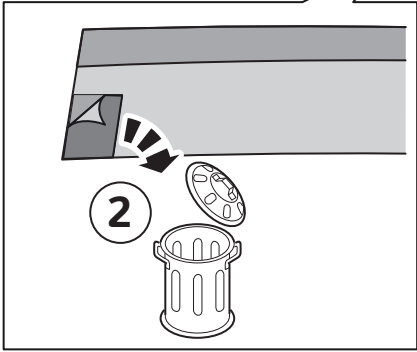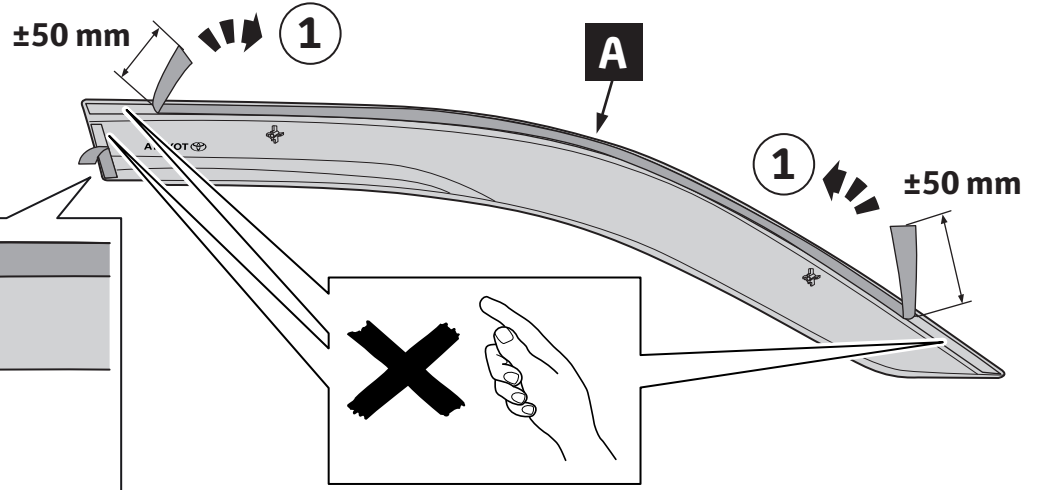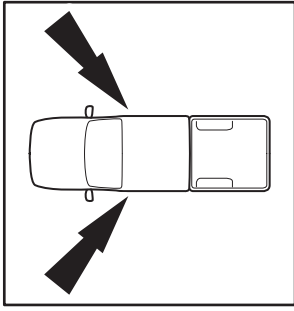


6

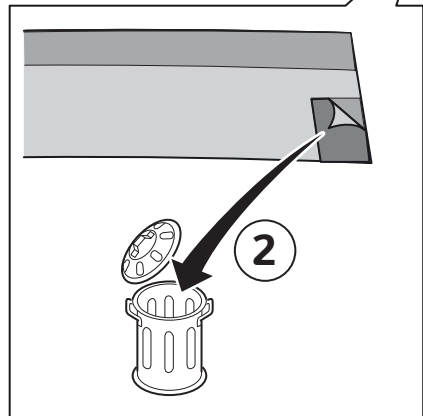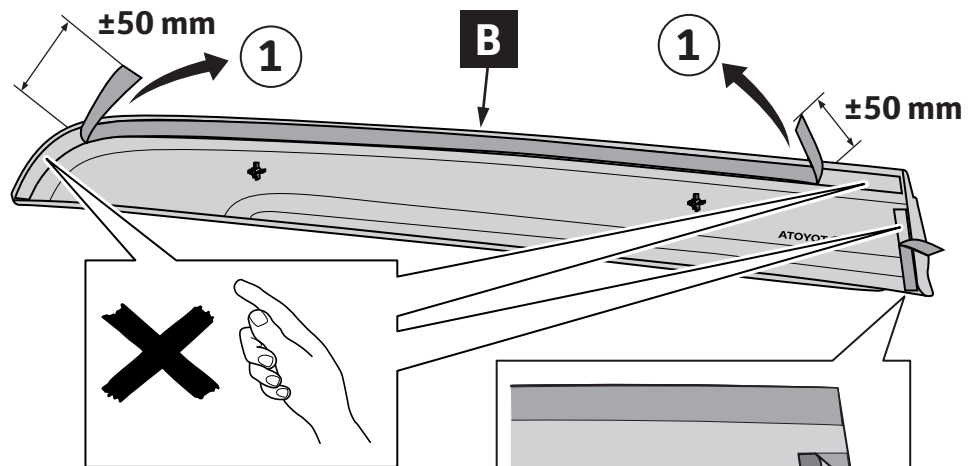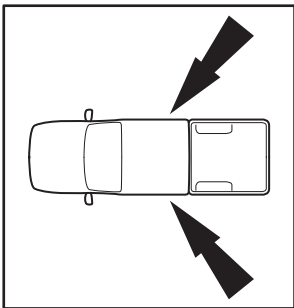




7

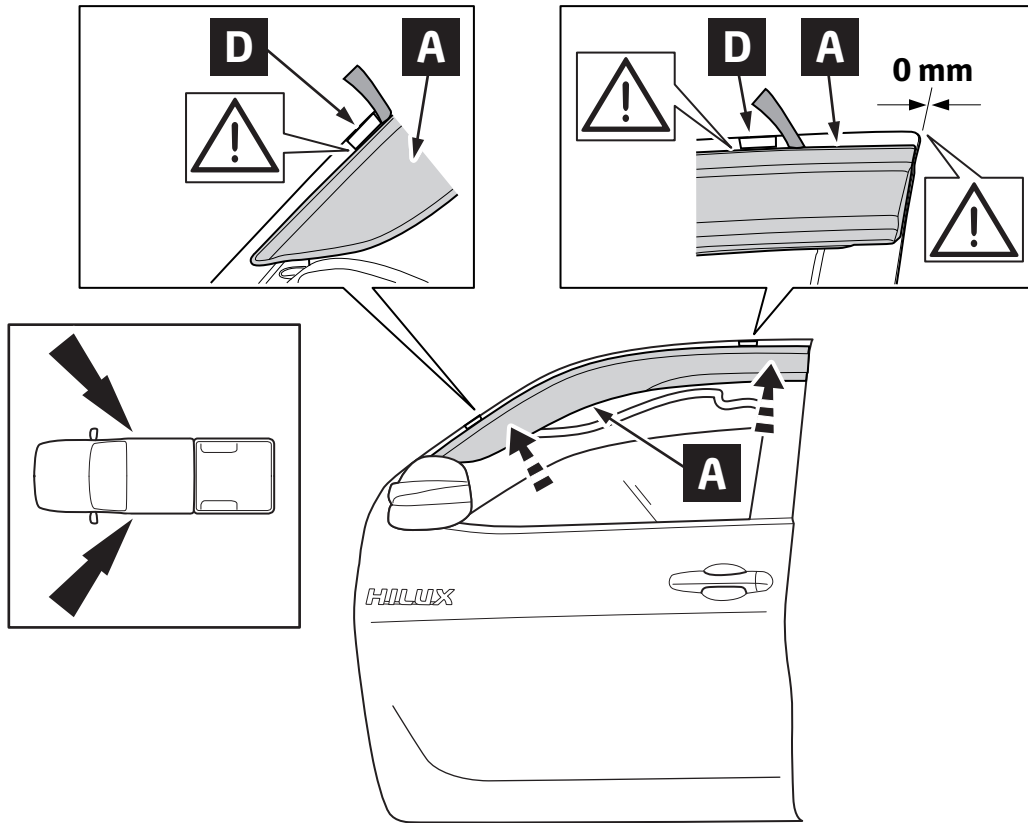



8

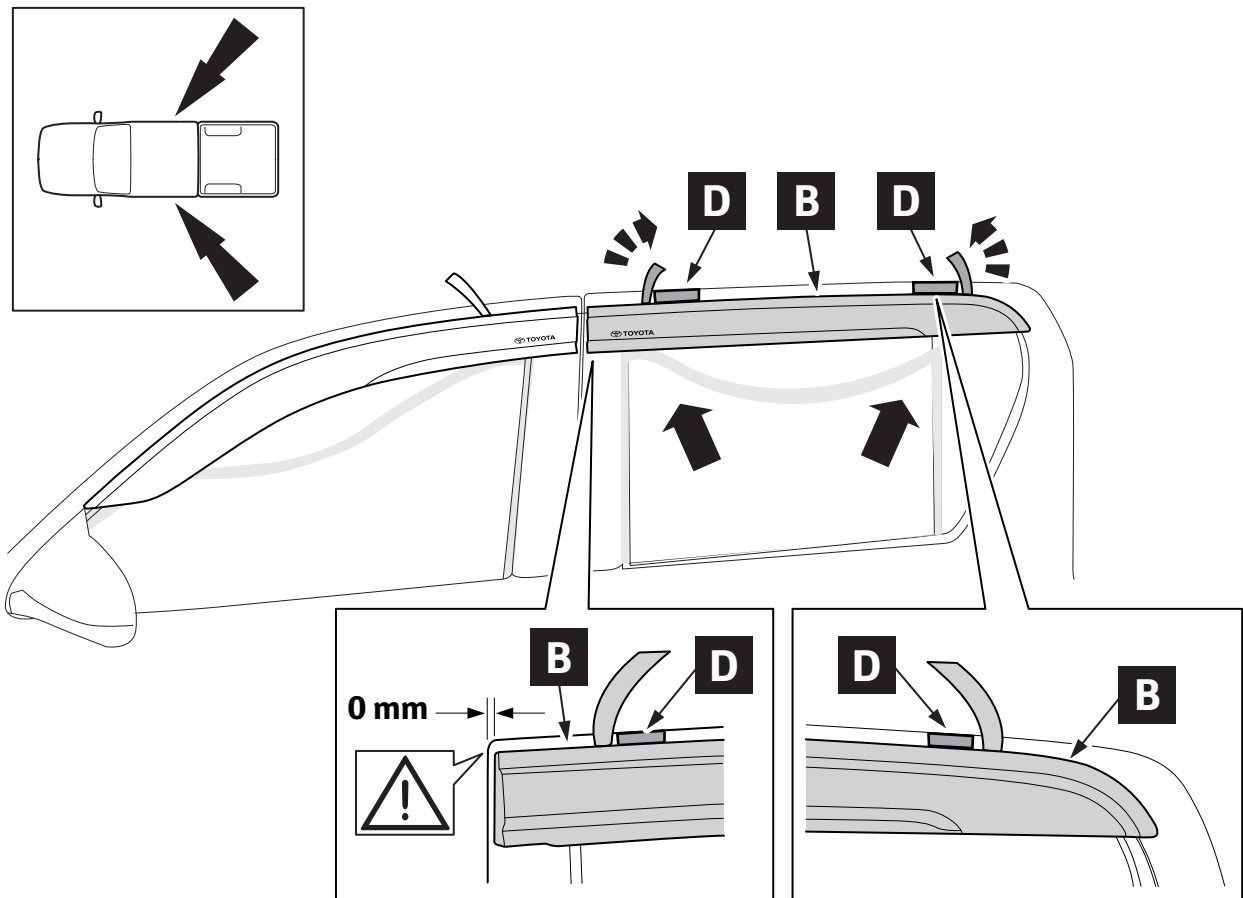




9

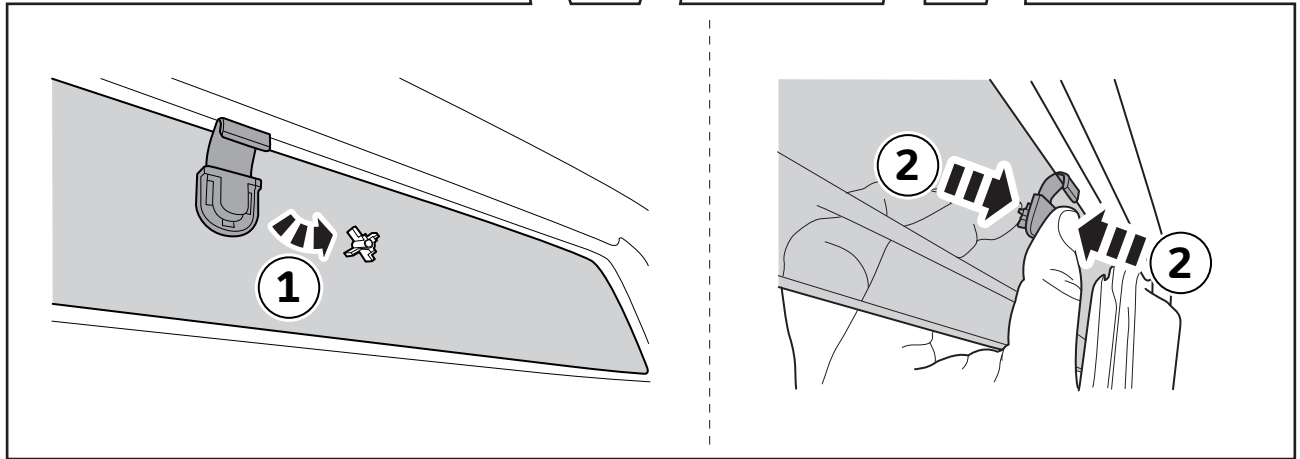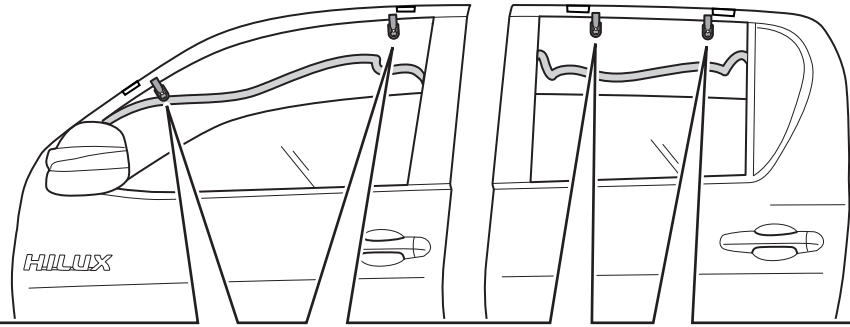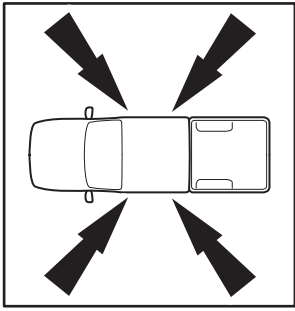




10

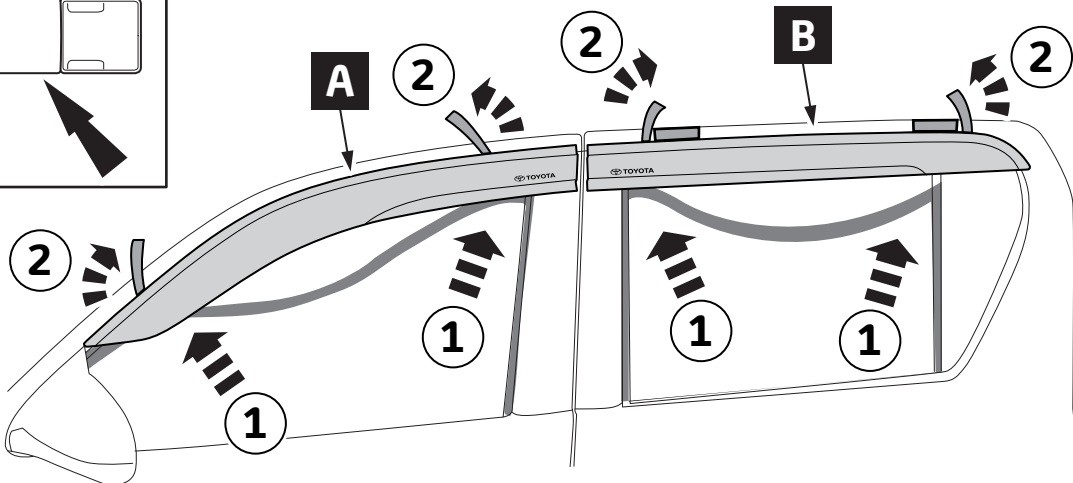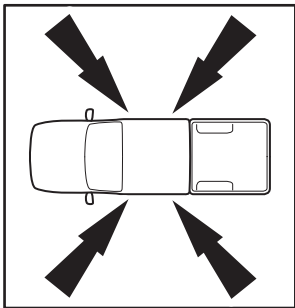







11

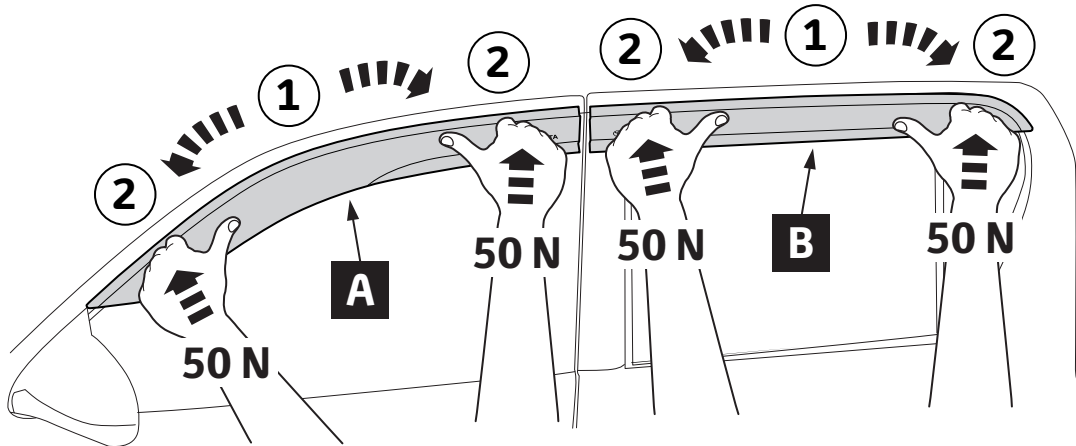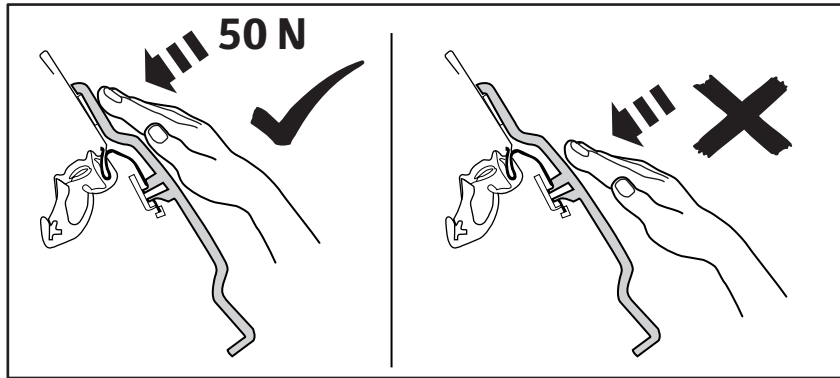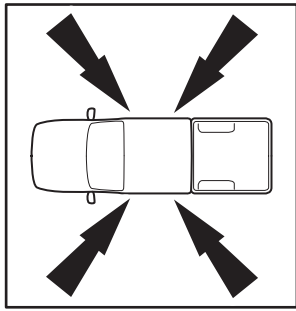


12

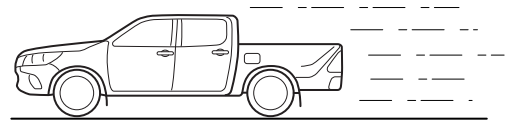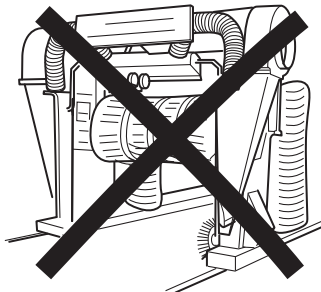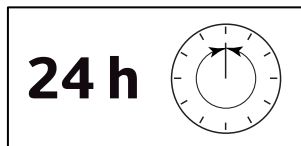


Max. 90 Km/h

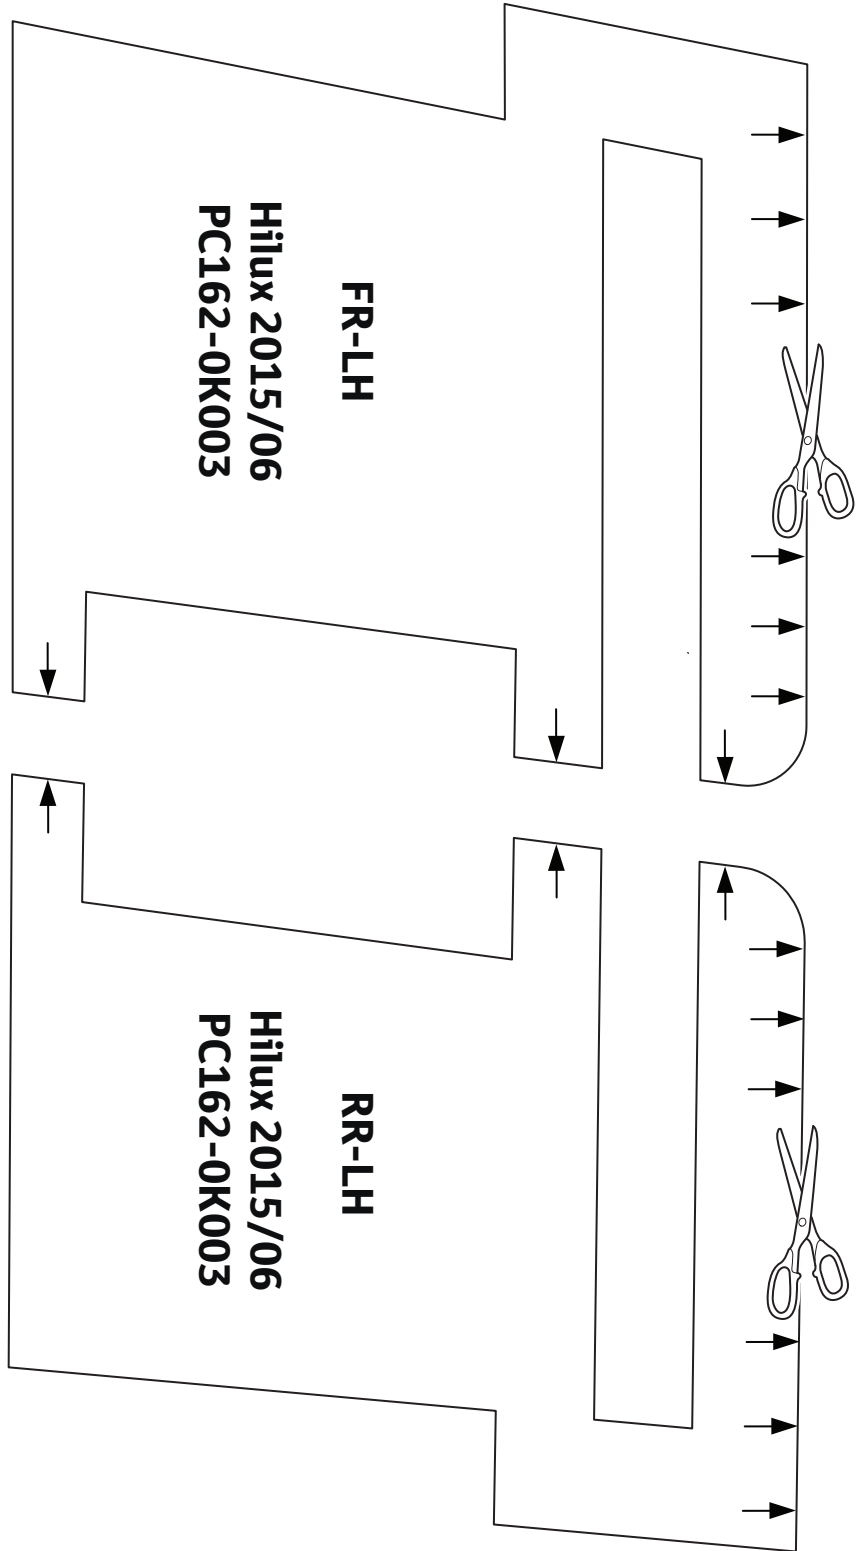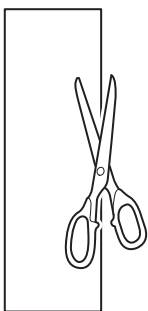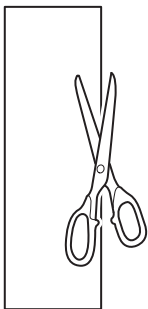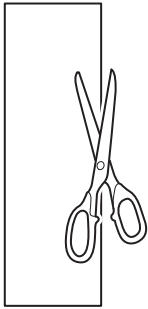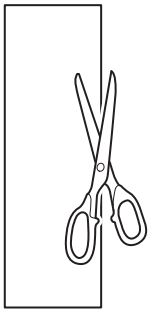



CHECK

Print 100%
Check with Rulers
before use.

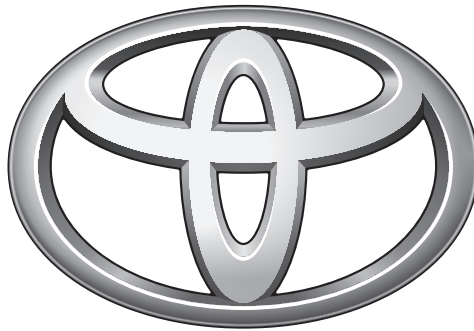



TOYOTA

0 10 20 30 40 50 60 70 80 90 100




100 90 80 70 60 50 40 30 20 10 0

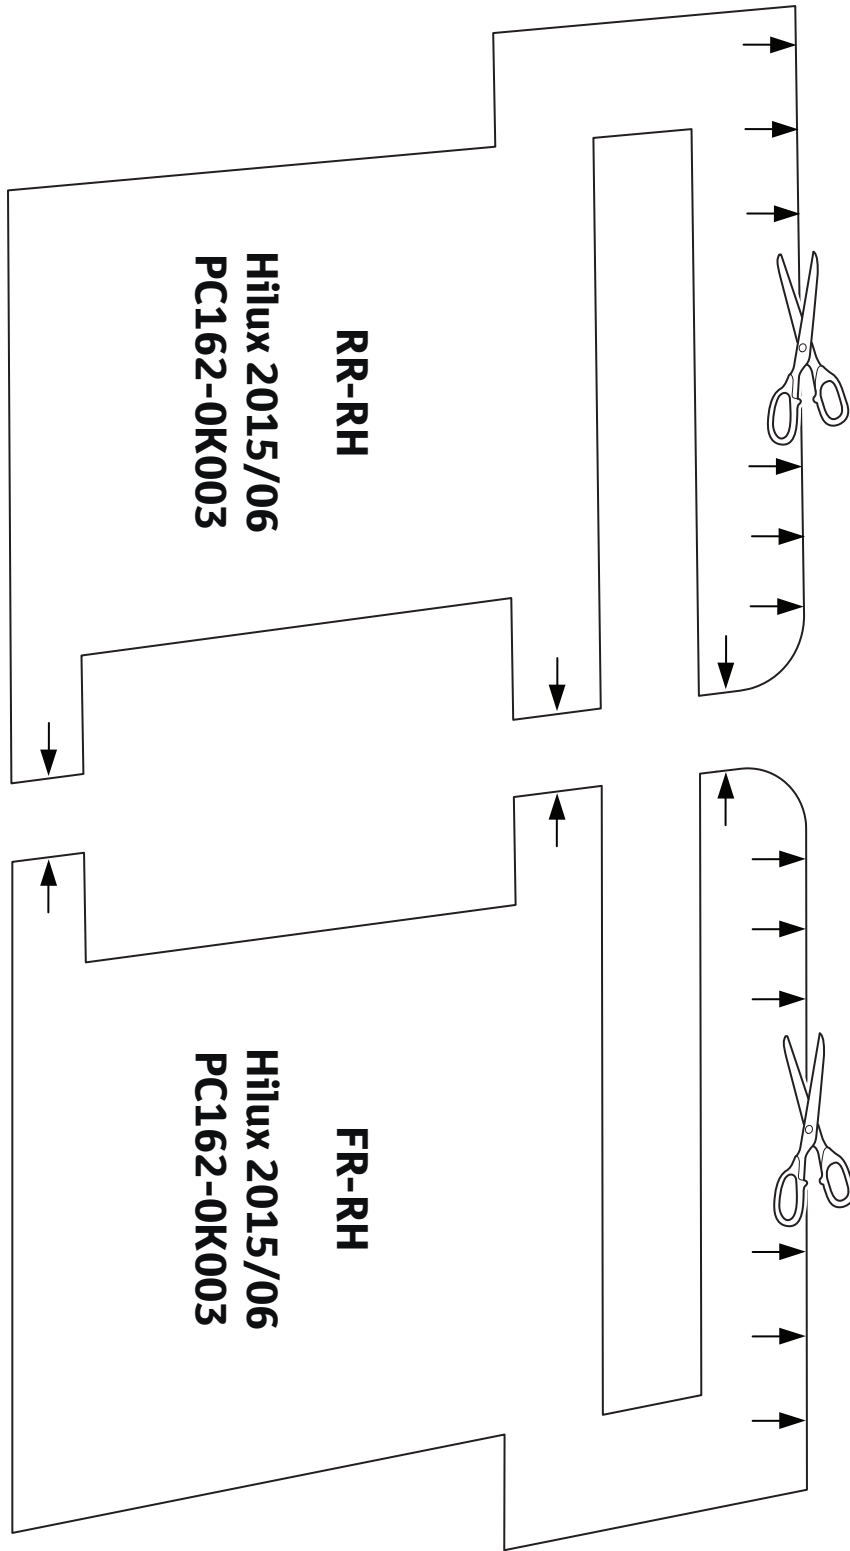


CHECK

Print 100%
Check with Rulers
before use.

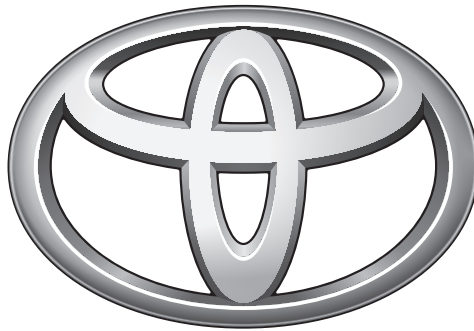

TOYOTA

CHECK SHEET


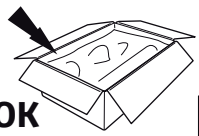




TOYOTA



Model / Year Hilux 2015/06 **Wind deflectors**


VIN n°


ALWAYS A BETTER WAY


  **P/N = OK**

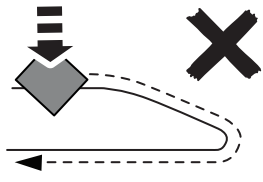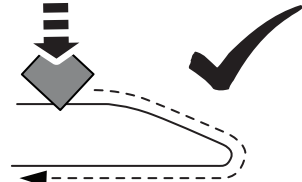  **= OK**

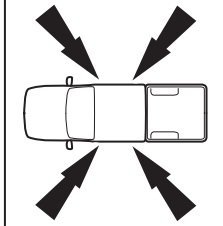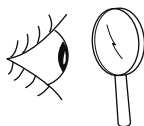

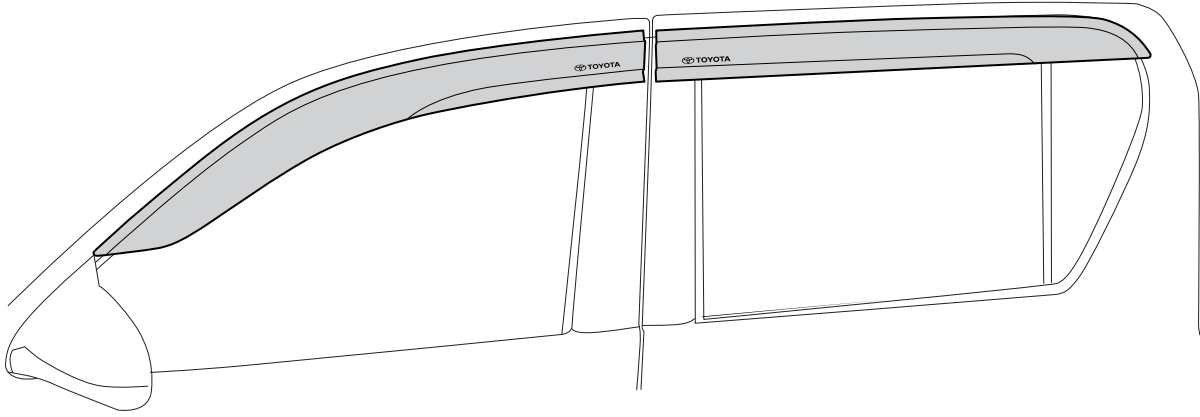 **= OK**

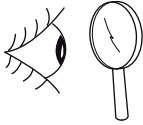

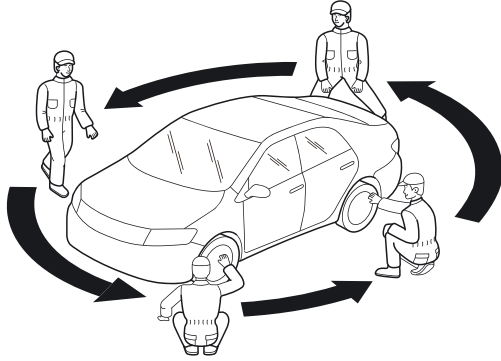Installation Date:
... / ... /

Technician Name & Signature:

Stamp: